WizFi630 User Manual

(Version 1.1)

© 2012 WIZnet Co., Ltd. All Rights Reserved.

For more information, please visit our website at http://www.wiznet.co.kr

Certification Information

CE for Class B ITE

INFORMATION TO THE USER
Hereby, WIZnet. Declares that this WizFi630 is in compliance with the essential requirements and other relevant provisions of directive 1999/5/EC and other relevant provisions of directive 1999/5/EC.

WARNING: This is a class B product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures

FCC for Class B ITE

INFORMATION TO THE USER
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no Guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

Document Revision History

Date	Revision	Changes
2012-07-02	1.0	Release
2012-07-17	1.1	Change WizFi630's picture at P10 Modify error sentence - P6, P18,P19 : WIZ630wi → WizFi630 - P24 : DNS server → DNS server address - P38 : WDS → WPS

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

<Contents>

1. Introduction 6
   1.1. Features 7
   1.2. Wireless Specifications 8
   1.3. Hardware Specifications 9
   1.4. Software Specifications 10
   1.5. EVB Construction 10
      1.5.1. Contents 10
   1.6. Block Diagram 12
2. Operation Mode and Description of Menu 13
   2.1. Operation Mode 13
      2.1.1. Access Point 13
      2.1.2. Gateway 14
      2.1.3. Client (Station) 14
      2.1.4. AP-Client Mode 15
      2.1.5. Ad-hoc Mode 15
   2.2. Menu List by Operation Mode 16
      2.2.1. Access Point (Bridge) Mode 16
      2.2.2. Gateway (Router) Mode 17
      2.2.3. Client (Station) Mode 18
      2.2.4. AP-Client Mode 19
      2.2.5. Ad-hoc Mode 21
   2.3. Internet Setting 23
      2.3.1. Internet connection setting 23
      2.3.2. Local network setting 25
      2.3.3. DHCP Client Information 26
      2.3.4. VPN setting 26
      2.3.5. Static Routing Setting 27
      2.3.6. QoS(802.1p) Setting 28
      2.3.7. VLAN(802.1p) 29
   2.4. Wireless setting 30
      2.4.1. Basic settings 30
      2.4.2. Advanced Wireless Settings 32
      2.4.3. Wireless Security 35
      2.4.4. WDS(Wireless Distribution System) Setting 38
      2.4.5. WPS Setting 39
      2.4.6. Wireless network status 41
      2.4.7. AP Wireless Statistics 42
      2.4.8. Station QoS/DLS(Direct Link Setup) Configurations 44
      2.4.9. Profile 45
      2.4.10. Link Status 46
      2.4.11. Site Survey 47
      2.4.12. WI-FI Multi-Bridge settings 48
   2.5. Serial to LAN(Wired and Wireless) 49
      2.5.1. Main Connection settings 50

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

2.5.2. Aux Connection Settings 50
2.5.3. Packing Condition (Incoming serial data packing condition) 51
2.5.4. Ethernet Data Tagging Option 51
2.6. Firewall settings 52
2.6.1. DMZ 52
2.6.2. Port forwarding 53
2.6.3. Packet filtering 54
2.6.4. Contents filtering 55
2.6.5. System Security 56
2.7. Managements 57
2.7.1. System Management 57
2.7.2. Firmware 58
2.7.3. Config Settings 59
2.7.4. Port Setting 60
2.7.5. Packet Statistics 61
2.7.6. System Status 62
2.7.7. System Log 63
3. Hardware Information 64
3.1. WizFi630 Pin Map 64
3.2. Dimensions 66
4. Important Notice 67

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

1. Introduction

WizFi630 is a gateway module that transforms the RS-232 protocol and TCP/IP protocol into IEEE802.11 b/g/n wireless LAN protocol. WizFi630 enables a device with RS-232 serial interface to connect to LAN or WLAN for remotely control, measuring, and administration. WizFi630 can also work as an IP router because of its internally embedded switch.

WizFi630 uses interfaces like Serial(UART), LAN, Wi-Fi(WLAN) to perform functions such as Serial(UART)-To-Wi-Fi, Serial-To-Ethernet, Ethernet-To-Wi-Fi. Users can connect to WizFi630's internal web server or use serial commands for simple Wi-Fi settings; not only serial devices but 8/16/32 bit micro controllers can also use UART for simple Wi-Fi settings.

WizFi630 can significantly reduce the processes for wireless module design, testing, and certification. Therefore, WizFi630 can be the best solution for users who lack wireless network experience.

WizFi630 follows the 802.11b/g/n standard and support up to 150Mbps speed in wireless interface.

WizFi630 provides a test board, pc software, and documents so that anyone can develop a wireless solution.

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

1.1. Features

- Complies with IEEE802.11b/g/n.
- Gateway/AP(Bridge)/AP-Client/Client(Station)/Ad-hoc Mode , WDS/Repeater supports
- 1T1R RF Interface
- Physical link rate up to 150Mpbs
- Built-in 3 Ethernet Ports
- 2 Serial Ports supports
- Working as Wi-Fi Router
- WEP 64/128bit, WPA/WPA2-PSK TKIP, AES
- 802.1x (Only in AP mode)
- 802.11e and WMM (Wi-Fi Multimedia)
- Router and Firewall function supports

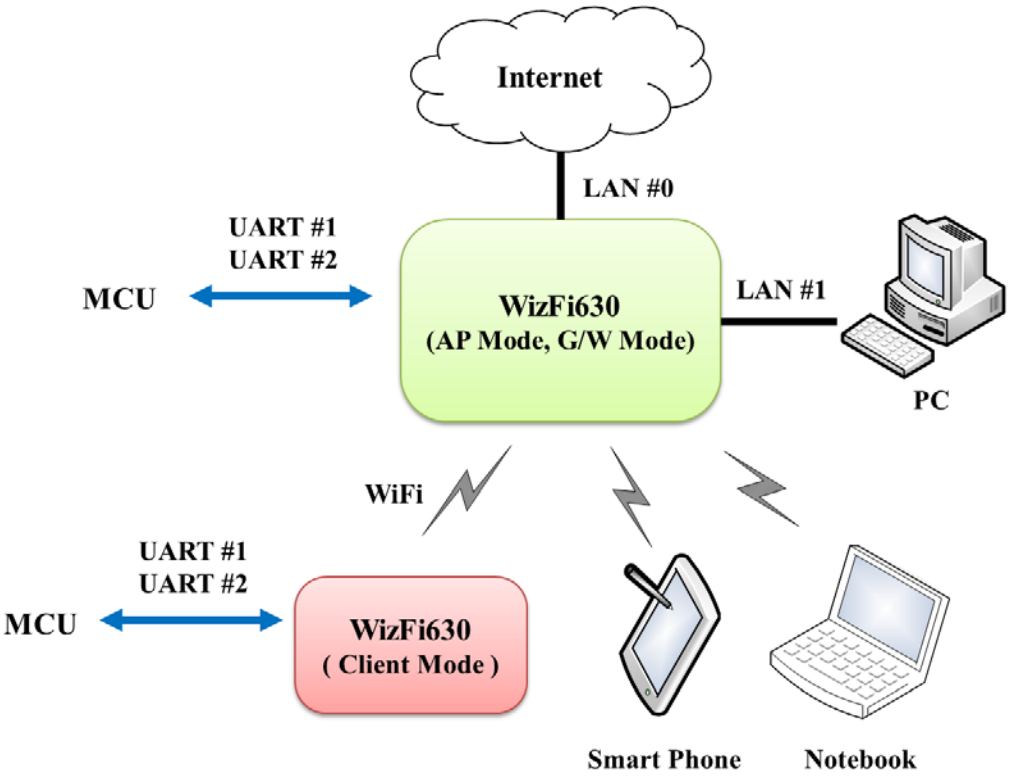

Figure 1. Example of WizFi630's Application

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

1.2. Wireless Specifications

Type	Description
Wireless Standard	IEEE802.11b/g/n
Frequency Range	USA: 2.400 ~ 2.483GHz Europe: 2.400 ~ 2.483GHz Japan: 2.400 ~ 2.497GHz China: 2.400 ~ 2.483GHz
Operating Channels	USA/Canada: 11(1 ~ 11) Major Europe Countries: 13(1 ~ 13) France: 4(10 ~ 13) Japan: 14 for 802.11b(1 ~ 14), 13 for 802.11g(1 ~ 13) Korea/China: 13(1 ~ 13)
Output Power (Tolerance(+/-1dBm)	802.11b: 17dBm@11Mbps 802.11g: 14dBm@54Mbps 802.11n: 14dBm@150Mbps/72Mbps
Receive Sensitivity	802.11b: -89dBm@11Mbps 802.11g: -74dBm@54Mbps 802.11n(40MHz): -66dBm@150Mbps 802.11n(20MHz): -70dBm@72Mbps
Data Rates	802.11b: 1,2,5.5,11Mbps 802.11g: 6,9,12,18,24,36,48,54Mbps 802.11n(20MHz): 7,14.5,21.5,28.5,43.5,57.5,65,72Mbps 802.11n(40MHz): 29.5,86.5,115,130,144,150Mbps
Modulation Type	11g: OFDM(64QAM, 16QAM, QPSK, BPSK) 11b: DSS(CCK, DQPSK, DBPSK)
Antenna	u.FL (EVB : 1T1R 2dBi)

Table 1. Wi-Fi Specifications

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

1.3. Hardware Specifications

Type	Description
Interface	**Serial port** : 2 EA **LAN port** : 3EA **USB port** : 1 USB Host Port (Reserved)
	U.FL(wireless)
Temperature	Operation: -10℃~70℃
Humidity	Operation: 10% to 90%, Non-Condensing Storage: 5% to 90%, Non-Condensing
Serial	Baud Rate : 1200 ~ 921,600bps
	Stop bits: 1, 2
	Parity: None, Odd, Even
	Flow Control: UART1: XON/XOFF(software), CTS/RTS(hardware), none UART2: XON/XOFF, none
Input Power	DC 3.3V / 1A
Power Consumption	Max : 3.3V / 600mA
Dimension	33mm X 43mm X 4.5mm
Weight	6g

Table 2. WizFi630 Module Specifications

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

1.4. Software Specifications

Type	Description
Operation Mode	Access Point(Bridge), Client(Station), Gateway, AP-Client, ad-hoc
Protocol	TCP, UDP, ARP, ICMP, DHCP, PPPoE, HTTP
Security	WEP 64/128bit WPA/WPA2-PSK AES/TKIP 802.1x (Only in AP Mode)
Configuration	Web Configuration, Serial Command, Configuration Tool
Notification	Event Logging
Serial To Wi-Fi	2 Serial Port supports

Table 3. SW Specifications

1.5. EVB Construction

1.5.1. Contents

Section	Qnt.	Contents
WizFi630	**1ea**	WizFi630
		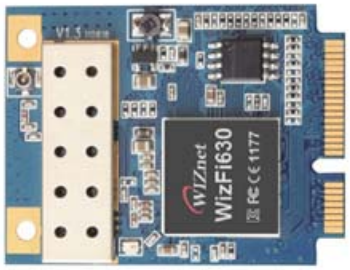
WizFi630-EVB	**1ea**	WizFi630-EVB

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

<table>
<tr><td rowspan="2">Antenna</td><td rowspan="2">1 ea</td><td>2dBi WI-FI Antenna (Model : W5I-B0-08)</td></tr>
<tr><td> </td></tr>
<tr><td rowspan="2">Serial Cable</td><td rowspan="2">1 ea</td><td>Serial Cable</td></tr>
<tr><td> </td></tr>
<tr><td rowspan="2">LAN Cable</td><td rowspan="2">1 ea</td><td>LAN Cable</td></tr>
<tr><td> </td></tr>
<tr><td rowspan="2">Adapter</td><td rowspan="2">1ea</td><td>DC 5V/2A Adapter</td></tr>
<tr><td> </td></tr>
</table>

Table 4. WizFi630-EVB Contents

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

1.6. Block Diagram

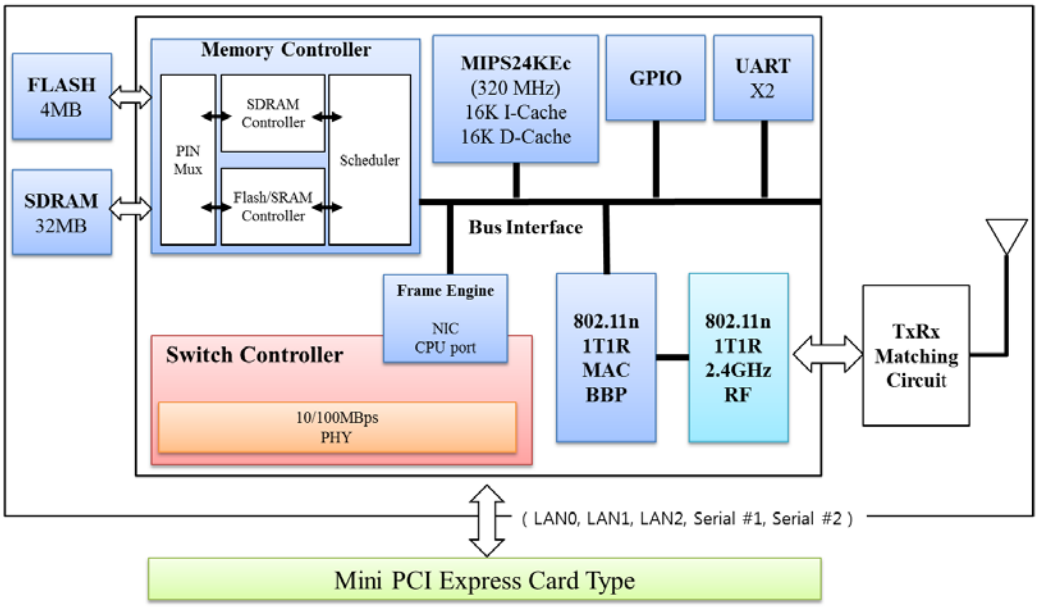

Figure 1. WizFi630 Block Diagram

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

2. Operation Mode and Description of Menu

2.1. Operation Mode

- ◆ User can select the operation mode.
- ◆ The default setting of WizFi630 is AP Mode. (DHCP Server Enabled)
- ◆ DHCP Server is usually disabled in AP mode, but for the user's convenience, DHCP Sever will be enabled.

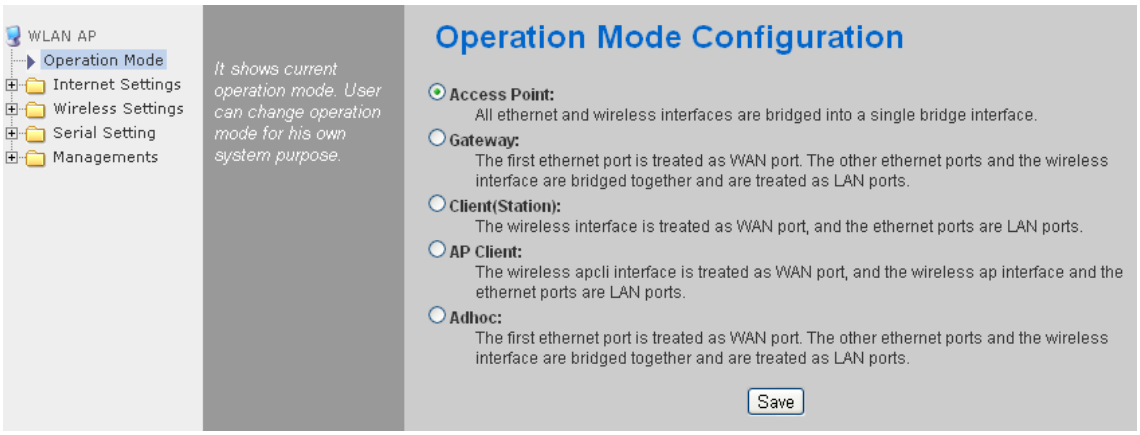
WLAN AP
Operation Mode
Internet Settings
Wireless Settings
Serial Setting
Managements
It shows current operation mode. User can change operation mode for his own system purpose.
Operation Mode Configuration
Access Point:
All ethernet and wireless interfaces are bridged into a single bridge interface.
Gateway:
The first ethernet port is treated as WAN port. The other ethernet ports and the wireless interface are bridged together and are treated as LAN ports.
Client(Station):
The wireless interface is treated as WAN port, and the ethernet ports are LAN ports.
AP Client:
The wireless apcli interface is treated as WAN port, and the wireless ap interface and the ethernet ports are LAN ports.
Adhoc:
The first ethernet port is treated as WAN port. The other ethernet ports and the wireless interface are bridged together and are treated as LAN ports.
Save

2.1.1. Access Point

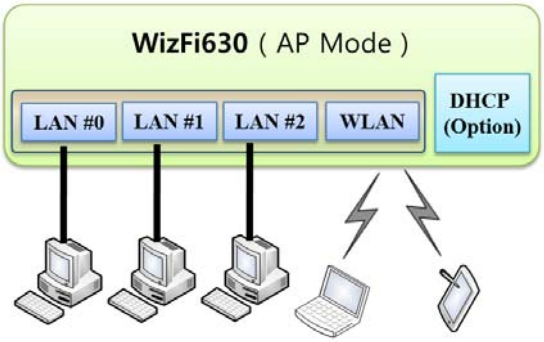

In this mode, all Ethernet ports and the wireless interface are bridged together. Wired/Wireless interface has the same IP address space with its top mesh. DHCP Server function is disabled and WizFi630 does not assign an IP. Wireless (LAN Port included) sending periodic Broadcast Packet to Station and maintains a connection with Station.

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

2.1.2. Gateway

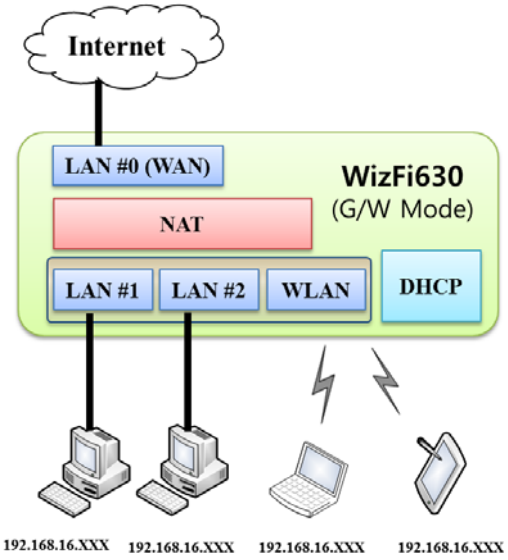

When operating in router mode, interfaces are separated into WAN I/F (Top Internet Business Network), LAN I/F (Sub Private Network: 192.168.16.xxx), and Wireless I/F (Sub Private Network: 192.168.16.xxx). Port # 0 will be assigned to the WAN Port. WizFi630 periodically sends Broadcast Packet to Sub-LAN (LAN Port included) and maintains connection with Station.

2.1.3. Client (Station)

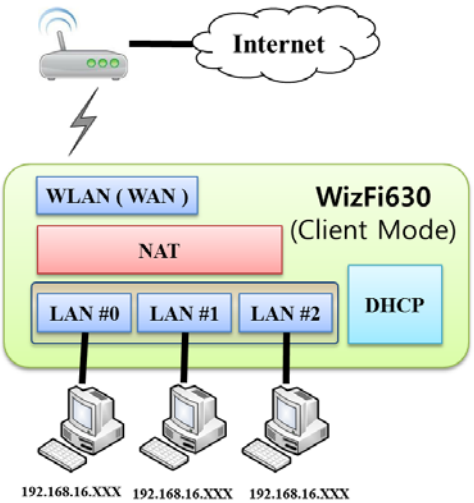

Wireless I/F is assigned as WAN Port and all Ethernet Ports are bound to LAN Port. Set the profile and the WizFi630 is automatically connected to the AP when re-booting in the future. Devices that are connected through the LAN port are assigned a private IP. WizFi630 periodically sends PING Packet to AP Gateway and maintains connection with AP.

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

2.1.4. AP-Client Mode

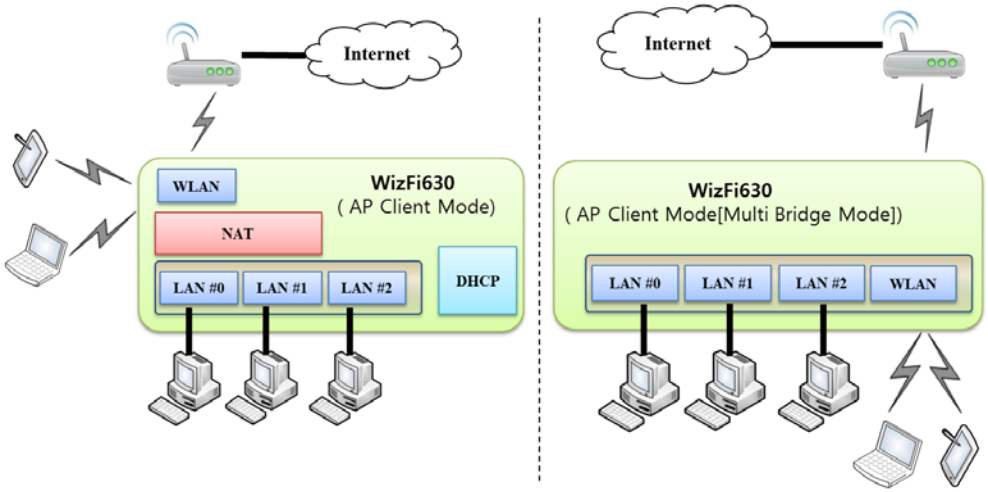

Wireless I/F is assigned as WAN Port and all Ethernet Ports are bound to LAN Port. This mode is similar to Station mode, however the difference is that the Wireless I/F will operate as client with AP simultaneously. WizFi630 periodically sends Broadcast Packet to Sub-LAN (LAN Port included) and maintains connection with Station.

2.1.5. Ad-hoc Mode

This mode is similar to Gateway mode. The Wireless I/F operates as ad-hoc and connects to Station Point-to-Point. There is no communication between the LAN Port and Wireless I/F (ad-hoc).
WAN ←→ ad-hoc: OK
WAN ←→ LAN: OK
ad-hoc ←→ ad-hoc: OK
ad-hoc ←→ LAN: No Communication

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

2.2. Menu List by Operation Mode

2.2.1. Access Point (Bridge) Mode

Menu	Detailed Menu	Description (Link)	List Number
Internet Setting	System IP	Internet connection setting	2.3.1
	LAN	Local network setting	2.3.2
	DHCP Clients	DHCP Client Information	2.3.3
	VPN Config	VPN setting	2.3.4
	QoS(802.1p)	QoS(802.1p) Setting	2.3.6
Wireless Setting	Basic	Basic settings	2.4.1
	Advanced	Advanced Wireless Settings (AP Mode)	2.4.2.1
	Security	Wireless Security setting	2.4.3
	WDS	WDS Setting	2.4.4
	WPS	WPS Setting (AP Mode)	2.4.5.1
	Station List	Wireless network status	2.4.6
	Packet Statistics	AP Wireless Statistics (AP Mode)	2.4.7.1
Serial Setting	Serial Port #1	Serial to LAN(Wired and Wireless)	2.5
	Serial Port #2		
Managements	System Mgmt	System Management	2.7.1
	Firmware Mgmt	Firmware	2.7.2
	Config Mgmt	Config Settings	2.7.3
	Port Mgmt	Port Setting	2.7.4
	Packet Statistics	Packet Statistics	2.7.5
	System Status	System Status	2.7.6
	System Log	System Log	2.7.7

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

2.2.2. Gateway (Router) Mode

Menu	Detailed Menu	Description (Link)	List Number
Internet Setting	WAN	Internet connection setting	2.3.1
	LAN	Local network setting	2.3.2
	DHCP Clients	DHCP Client Information	2.3.3
	VPN Config	VPN setting	2.3.4
	Routing	Static Routing Setting	2.3.5
	Qos(802.1p)	QoS(802.1p) Setting	2.3.6
	VLAN(802.1q)	VLAN(802.1p)	2.3.7
Wireless Setting	Basic	Basic settings	2.4.1
	Advanced	Advanced Wireless Settings (AP Mode)	2.4.2.1
	Security	Wireless Security setting	2.4.3
	WDS	WDS Setting	2.4.4
	WPS	WPS Setting (AP Mode)	2.4.5.1
	Station List	Wireless network status	2.4.6
	Packet Statistics	AP Wireless Statistics (AP Mode)	2.4.7.1
Serial Setting	Serial Port #1	Serial to LAN(Wired and Wireless)	2.5
	Serial Port #2		
Firewall	DMZ	DMZ	2.6.1
	Port Forwarding	Port forwarding	2.6.2
	Packet Filtering	Packet filtering	2.6.3
	Contents Filtering	Contents filtering	2.6.4
	System Security	System Security	2.6.5
Managements	System Mgmt	System Management	2.7.1
	Firmware Mgmt	Firmware	2.7.2
	Config Mgmt	Config Settings	2.7.3
	Port Mgmt	Port Setting	2.7.4
	Packet Statistics	Packet Statistics	2.7.5
	System Status	System Status	2.7.6
	System Log	System Log	2.7.7

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

2.2.3. Client (Station) Mode

◆ WizFi630 works as a Wi-Fi client(station) which is always paired with a Wi-Fi AP.

◆ Users can take Client Mode as an opposite of Gateway Mode

Menu	Detailed Menu	Description (Link)	List Number
Internet Setting	WAN	Internet connection setting	2.3.1
	LAN	Local network setting	2.3.2
	DHCP Clients	DHCP Client Information	2.3.3
	VPN Config	VPN setting	2.3.4
	Routing	Static Routing Setting	2.3.5
	Qos(802.1p)	QoS(802.1p) Setting	2.3.6
	VLAN(802.1q)	VLAN(802.1p)	2.3.7
Wireless Setting	Profile	Profile	2.4.9
	Link Status	Link Status	2.4.10
	Site Survey	Site Survey	2.4.11
	Packet Statistics	AP Wireless Statistics (Client Mode)	2.4.7.2
	Advance	Advanced Wireless Settings(Client Mode)	2.4.2.2
	QoS	Station QoS/DLS(Direct Link Setup) Configurations	2.4.8
	WPS	WPS Settings (Client Mode)	2.4.5.2
Serial Setting	Serial Port #1	Serial to LAN(Wired and Wireless)	2.5
	Serial Port #2		
Firewall	DMZ	DMZ	2.6.1
	Port Forwarding	Port forwarding	2.6.2
	Packet Filtering	Packet filtering	2.6.3
	Contents Filtering	Contents filtering	2.6.4
	System Security	System Security	2.6.5
Managements	System Mgmt	System Management	2.7.1
	Firmware Mgmt	Firmware	2.7.2
	Config Mgmt	Config Settings	2.7.3
	Port Mgmt	Port Setting	2.7.4
	Packet Statistics	Packet Statistics	2.7.5
	System Status	System Status	2.7.6
	System Log	System Log	2.7.7

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

2.2.4. AP-Client Mode

- AP-Client Mode Settings are very similar to the Gateway Mode Settings.
- The table below shows the added features of AP-Client mode.
- One module can operate as both AP and Station.
- The wireless module connects to a different AP and functions as WAN port.
- The channel of WizFi630 must be identical to the channel of AP to be connected
- Support wireless bridge.

Menu	Detailed Menu	Description (Link)	List Number
Internet Setting	WAN	Internet connection setting	2.3.1
	LAN	Local network setting	2.3.2
	DHCP Clients	DHCP Client Information	2.3.3
	VPN Config	VPN setting	2.3.4
	Routing	Static Routing Setting	2.3.5
	Qos(802.1p)	QoS(802.1p) Setting	2.3.6
Wireless Setting	Basic	Basic settings	2.4.1
	Advanced	Advanced Wireless Settings (AP Mode)	2.4.2.1
	Security	Wireless Security setting	2.4.3
	WDS	WDS Setting	2.4.4
	WPS	WPS Setting (AP Mode)	2.4.5.1
	WIFI Multi Bridge	WIFI Multi-Bridge settings	2.4.12
	Station List	Wireless network status	2.4.6
	Packet Statistics	AP Wireless Statistics (AP Mode)	2.4.7.1
Serial Setting	Serial Port #1	Serial to LAN(Wired and Wireless)	2.5
	Serial Port #2		
Firewall	DMZ	DMZ	2.6.1
	Port Forwarding	Port forwarding	2.6.2
	Packet Filtering	Packet filtering	2.6.3
	Contents Filtering	Contents filtering	2.6.4
	System Security	System Security	2.6.5
Managements	System Mgmt	System Management	2.7.1
	Firmware Mgmt	Firmware	2.7.2
	Config Mgmt	Config Settings	2.7.3
	Port Mgmt	Port Setting	2.7.4
	Packet Statistics	Packet Statistics	2.7.5

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

	System Status	System Status	2.7.6
	System Log	System Log	2.7.7

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

2.2.5. Ad-hoc Mode

- Settings for ad-hoc mode are almost the same as settings for Client (Station) Mode as previously shown.
- The difference with Client mode is that Client mode is used to connect AP.
- Client Mode connects to AP, whereas ad-hoc Mode connects with stations that use the same SSID.
- Both 1:1 connection and 1:N connection are possible
- In case of 1:N, N is possible up to 255

Menu	Detailed Menu	Description (Link)	List Number
Internet Setting	WAN	Internet connection setting	2.3.1
	LAN	Local network setting	2.3.2
	DHCP Clients	DHCP Client Information	2.3.3
	VPN Config	VPN setting	2.3.4
	Routing	Static Routing Setting	2.3.5
	Qos(802.1p)	QoS(802.1p) Setting	2.3.6
Wireless Setting	Profile	Profile	2.4.9
	Link Status	Link Status	2.4.10
	Site Survey	Site Survey	2.4.11
	Packet Statistics	AP Wireless Statistics (Client Mode)	2.4.7.2
	Advance	Advanced Wireless Settings(Client Mode)	2.4.2.2
	QoS	Station QoS/DLS(Direct Link Setup) Configurations	2.4.8
	WPS	WPS Settings (Client Mode)	2.4.5.2
Serial Setting	Serial Port #1	Serial to LAN(Wired and Wireless)	2.5
	Serial Port #2		
Firewall	DMZ	DMZ	2.6.1
	Port Forwarding	Port forwarding	2.6.2
	Packet Filtering	Packet filtering	2.6.3
	Contents Filtering	Contents filtering	2.6.4
	System Security	System Security	2.6.5
Managements	System Mgmt	System Management	2.7.1
	Firmware Mgmt	Firmware	2.7.2
	Config Mgmt	Config Settings	2.7.3
	Port Mgmt	Port Setting	2.7.4
	Packet Statistics	Packet Statistics	2.7.5
	System Status	System Status	2.7.6

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

	System Log	System Log	2.7.7

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

2.3. Internet Setting

2.3.1. Internet connection setting

◆ Select the internet service type and WizFi630 can connect to the internet

◆ If users would like access to Internet, Gateway Mode should be selected.

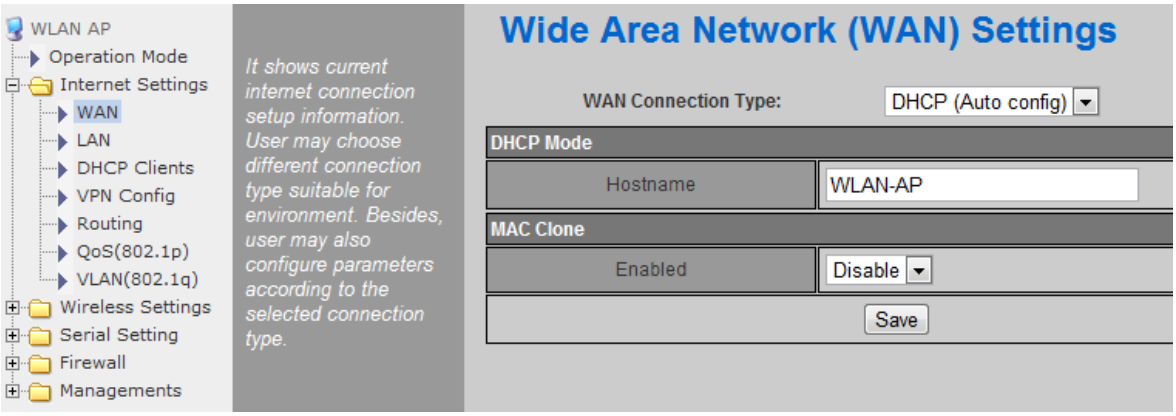

Type	Description
WAN Connection Type	Select the communication ways for Internet's connection - Static(Fixed IP) - DHCP (Auto config) - PPPoE
Host Name	Settings about module's host name
Mac Clone	Some ISPs require that you register a MAC address. Users can directly enter MAC address or use the MAC Clone function

Type	Description
DHCP(Auto config)	User should choose DHCP Mode when the user connects to the internet service such as FTTH, cable modems, VDSL, or IP-ADSL 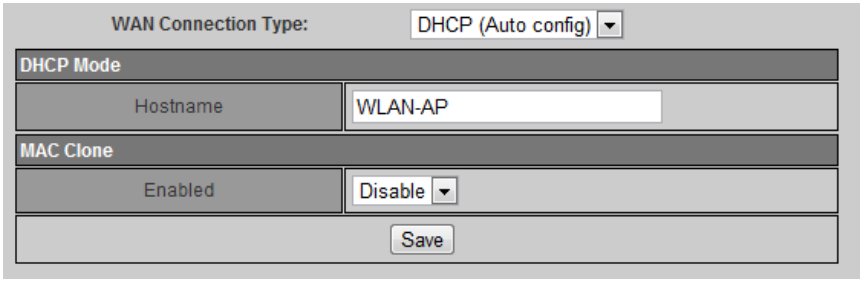
Static(Fixed IP)	Static IP setting window. If user receives static IP from ISP, user should set the Fixed IP

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

<table>
<tr>
<td></td>
<td>
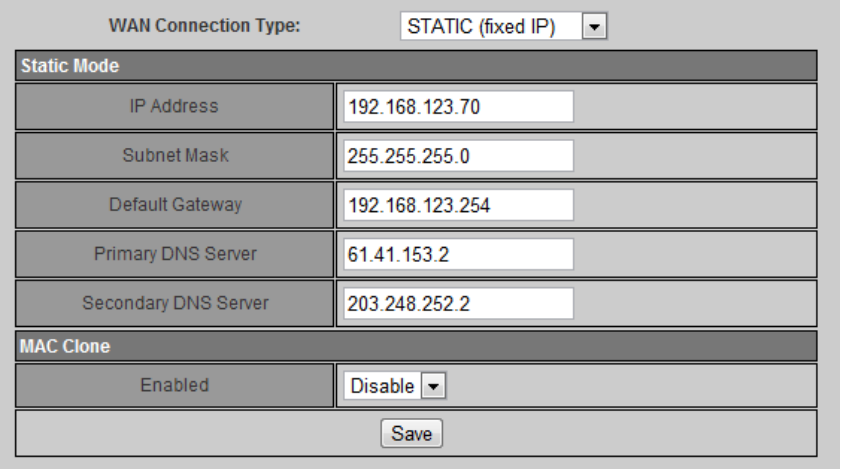

Input the network information that got from ISP
(such as IP, Subnet, Gateway, DNS)
</td>
</tr>
<tr>
<td>PPPoE(ADSL)</td>
<td>
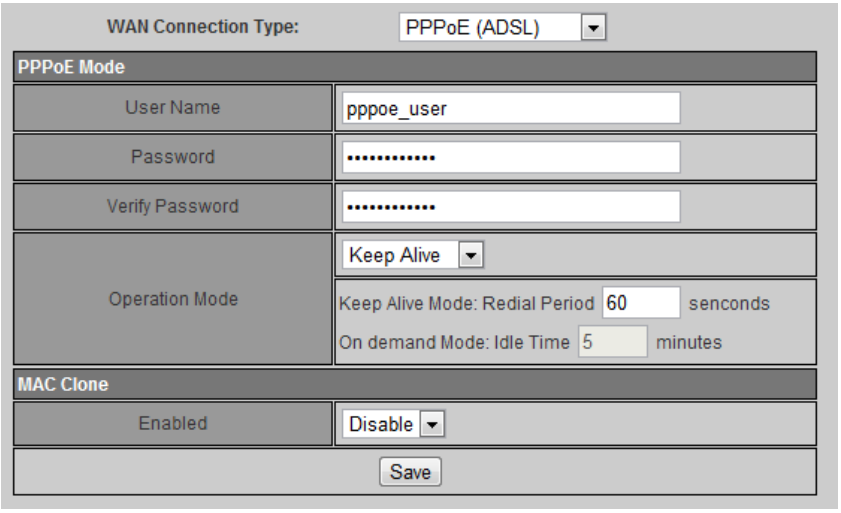

-. User Name: Setting the User Name received from ISP
-. Password: Password assigned by ISP
-. Operation Mode: This mode is used for re-connecting when connection is bad
</td>
</tr>
</table>

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

2.3.2. Local network setting

◆ WizFi630 internal IP setting, DHCP server setting and DHCP.

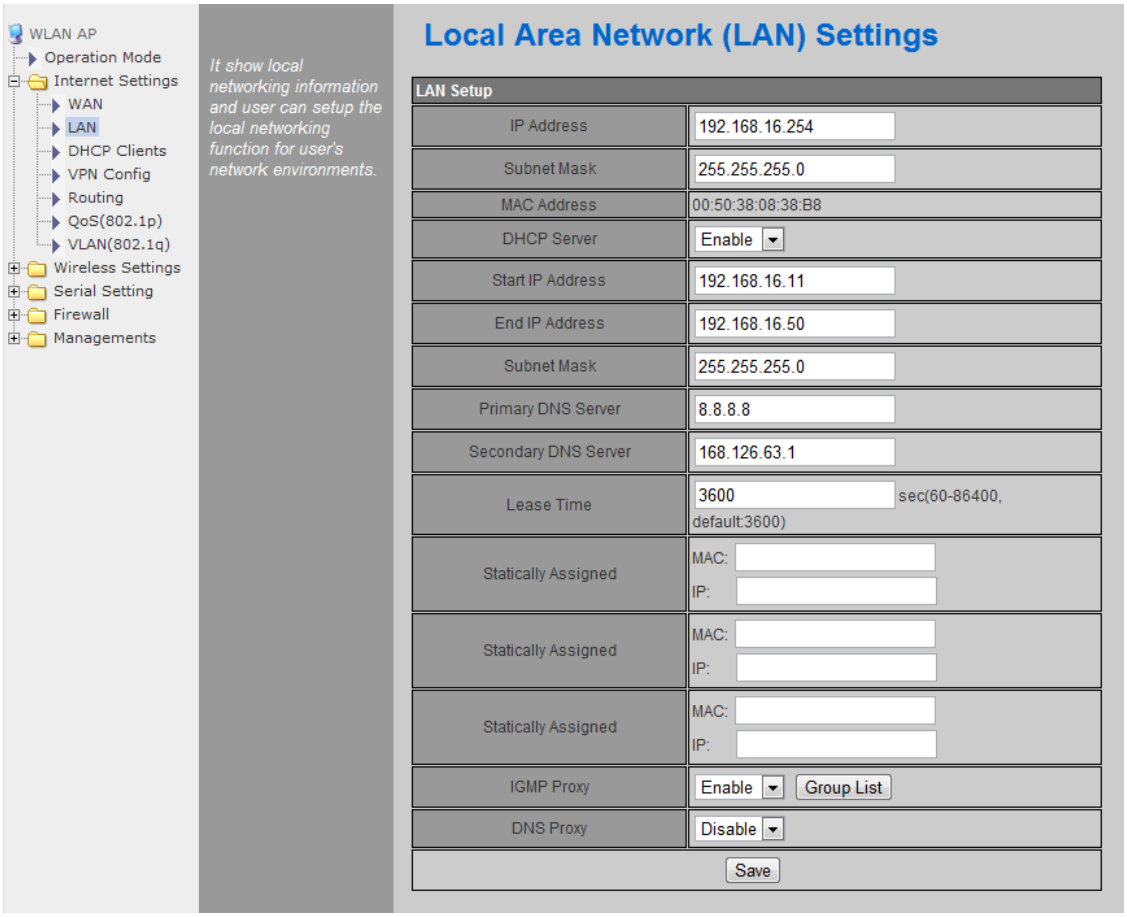

Type	Description
IP Address	Enter the module's IP. (Default Value : 192.168.16.254)
Subnet Mask	Enter the module's subnet mask.
MAC Address	MAC Address of module's LAN port (Wireless included). (Read Only)
DHCP Server	Decide whether the module's DHCP server will be used.
Start IP Address	Set the start IP address that will be assigned from the DHCP server
End IP Address	Set the end IP address that will be assigned from the DHCP server.
Subnet Mask	Enter the value of subnet mask.
Primary DNS Server	Enter the primary DNS server address.
Secondary DNS Server	Enter the secondary DNS server address.
Lease Time	Enter the lease time when IP address is assigned.
Statically Assigned	Maximum of three IP can be statically assigned when IP address is assigned.

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

2.3.3. DHCP Client Information

◆ The IP information that is assigned from the DHCP server is shown.

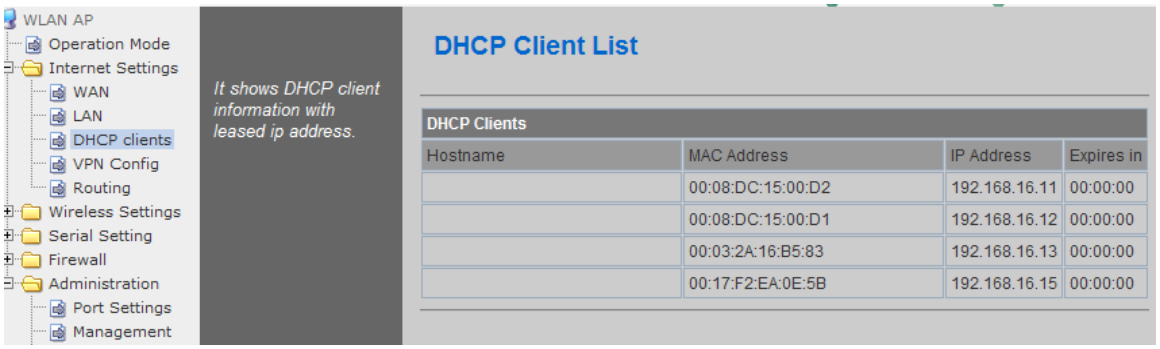

Type	Description
Host name	Client's host name is shown
Mac Address	Client's MAC address is shown.
IP Address	Client's IP address is shown.
Expires in	The usable time of client's IP address is shown.

2.3.4. VPN setting

◆ This section will explain on VPN packet settings.

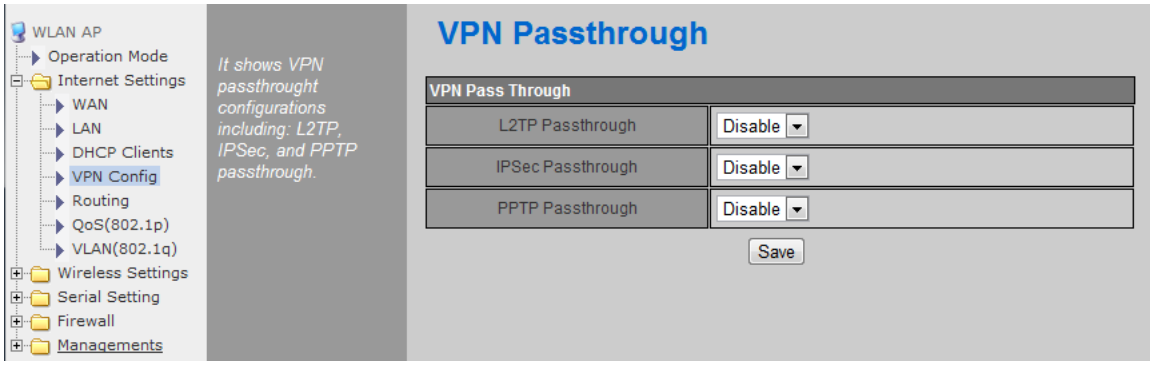

Type	Description
L2TP Pass-through	Enable : VPN L2TP packet is passed through WAN. Disable : VPN L2TP packet is not passed through WAN. (Default value)
IPSec Pass-through	Enable : VPN IPSec packet is passed through WAN. Disable : VPN IPSec packet is not passed through WAN. (Default value)
PPTP Pass-through	Enable : VPN PPTP packet is passed through WAN. Disable : VPN PPTP packet is not passed through WAN. (Default value)

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

2.3.5. Static Routing Setting

◆ User can modify the routing table at static routing settings.

◆ We do not recommend any modification.

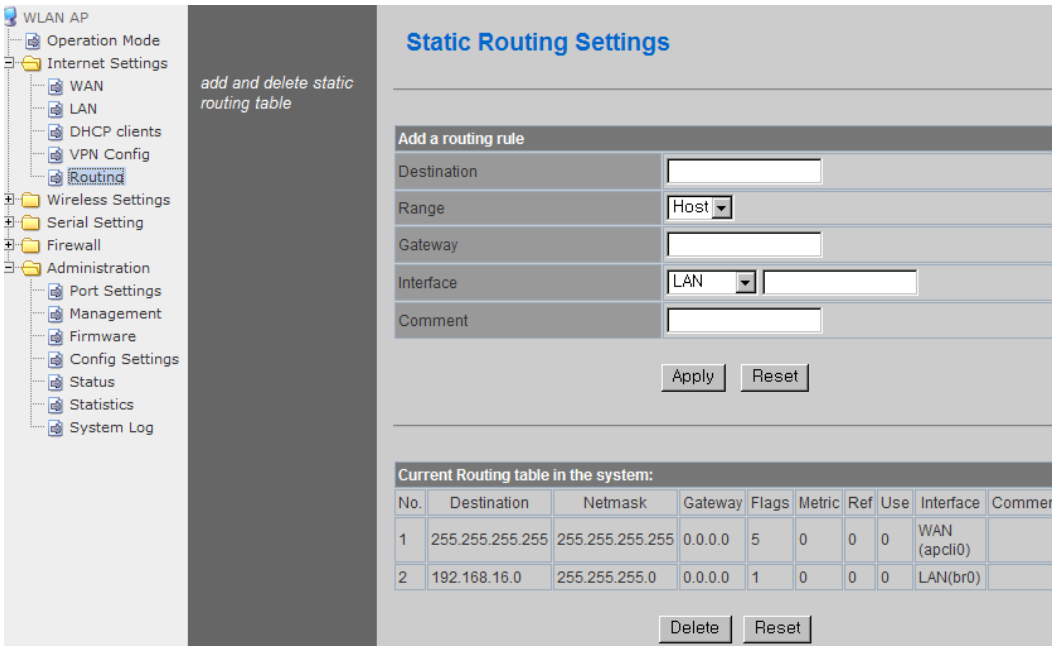

Type	Description
Destination	Enter the Target IP address or network address.
Range	Select whether the routing table is HOST or NETWORK
Netmask	If Range is NETWORK, enter subnet mask.
Gateway	Enter the gateway address to be passed when communicating with target.
Interface	Select whether the target is LAN or WAN.

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

2.3.6. QoS(802.1p) Setting

◆ Settings for QoS / DLS in Station mode.

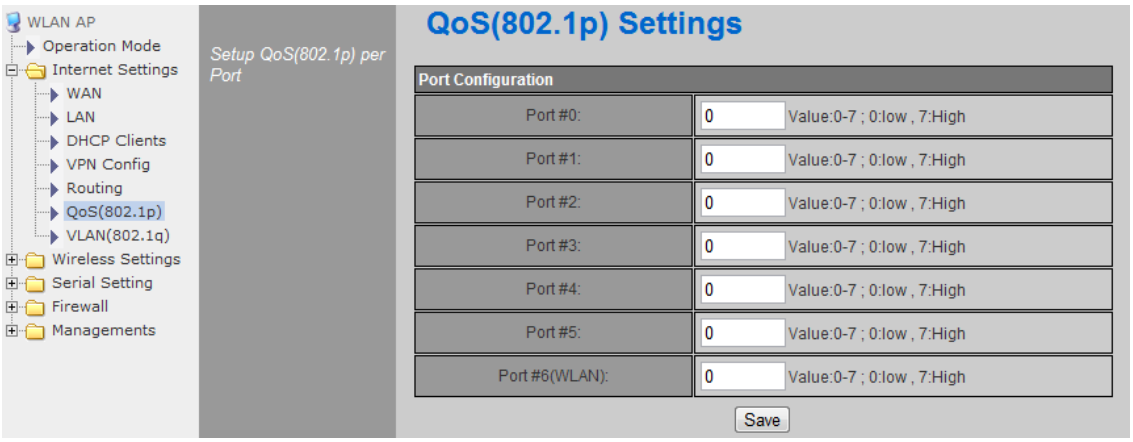

Type	Description
Port #0 ~ Port#5	Set a QoS value from 0~7
Port #6(WLAN)	Set a QoS value from 0~7

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

2.3.7. VLAN(802.1p)

◆ Settings for VLAN ID value and Tag/Untag.

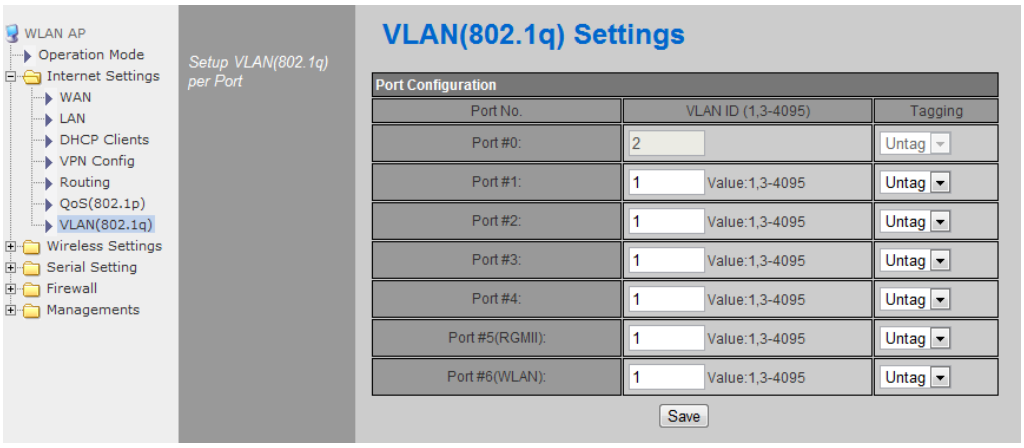

Type	Description
VLANID	ID for connection with VLAN.
Tagging	Select to add information related to VLAN.

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

2.4. Wireless setting

2.4.1. Basic settings

◆ This chapter is about basic setting for wireless LAN.

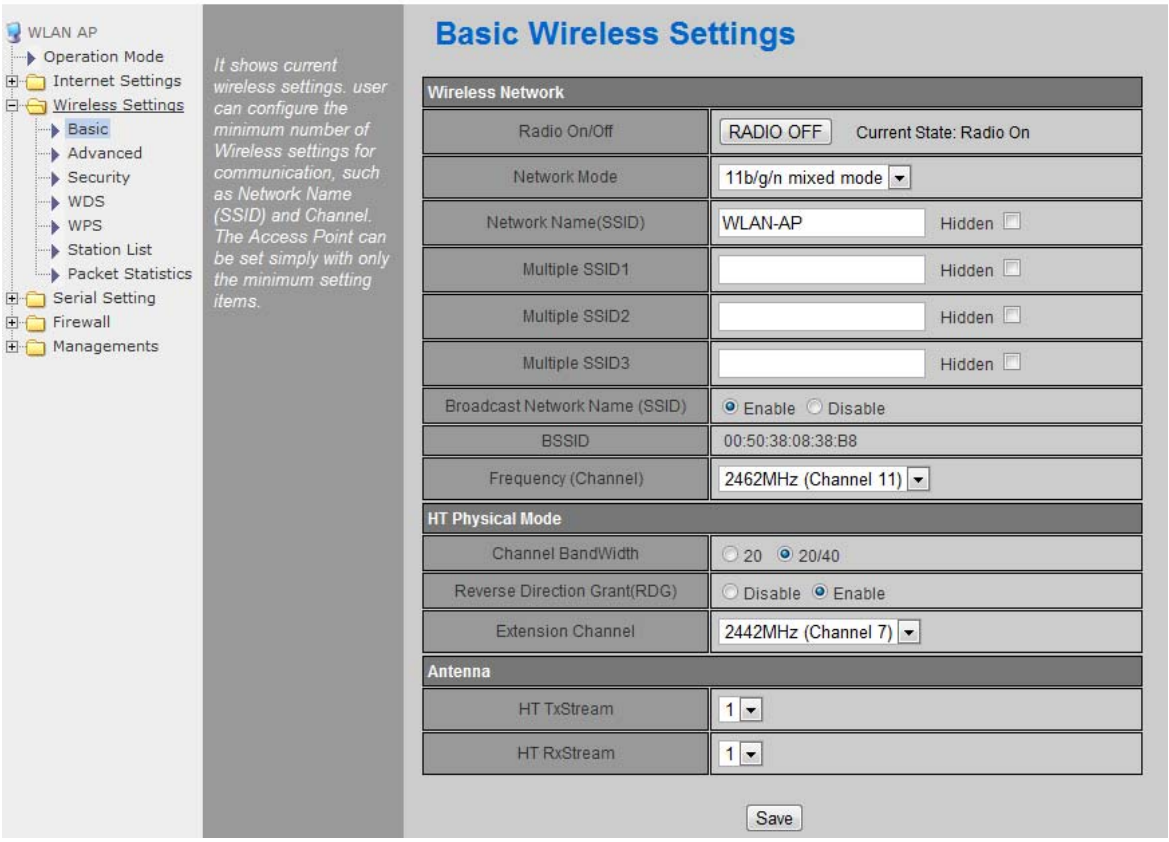

Type	Description
Radio On/Off	Decide radio on/off of wireless AP function.
Network Mode	11b/g/n mixed mode: 802.11b/g/n are supported. 11b/g mixed mode: 802.11b/g are supported. 11b only: only 802.11b is supported. 11g only: only 802.11g is supported. 11n only: only 802.11n is supported
SSID	Enter the name of the wireless network.
Broadcast Network Name	AP or Wireless network status can be checked by notifying the SSID to the wireless device. AP cannot be searched if this function is disabled.
Frequency(Channel)	Select the channel of wireless network.
Channel Bandwidth	Fix bandwidth channel to 20MHz. Use 40MHz as bandwidth in case connection with wireless station that supports 11n channel bonding..
Reverse Direction Grant(RDG)	The wireless performance can be improved using Reverse Direct Grant, 11n's RDG technology.

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

Type	Description
Extension Channel	Setting for the other 20MHz area when channel bandwidth is set to 40MHz
HT TxStream	Setting for number of Tx antennas of 2T2R system.
HT RxStream	Setting for number of Rx antennas of 2T2R system.

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

2.4.2. Advanced Wireless Settings

2.4.2.1. Advanced Wireless Settings (AP Mode)

◆ Only works at the AP Mode, Gateway Mode, and AP-Client Mode

◆ This chapter is about higher-level setting for wireless LAN.

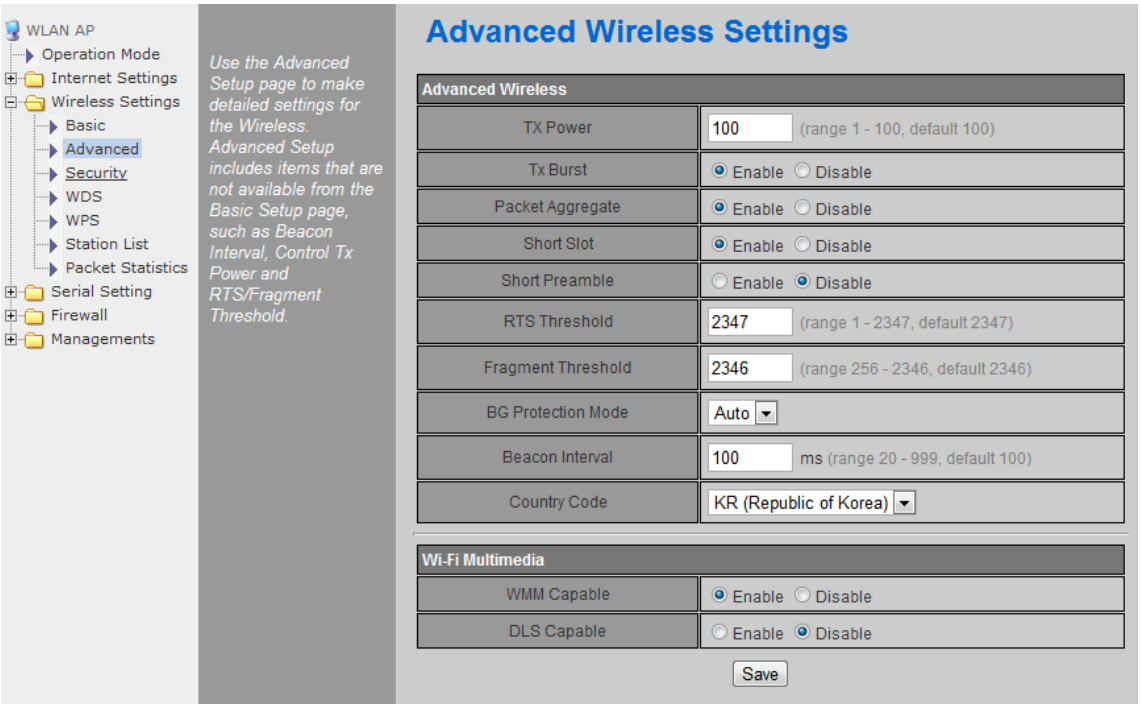

Type	Description
Tx Power	Controls the range of wireless radio being sent. The range of wireless radio being sent gets larger as the value is larger.
Tx Burst	The wireless speed can be maximized by enabling this function. However, it is recommended to disable this function for stable connection when numerous stations are connected together..
Packet Aggregate	Numerous packets can be transmitted in one MPDU by enabling this function
Short Slot	The performance of wireless station connected to 11g can be improved by enabling Short Slot. However, it is recommended to disable Short Slot if there is a wireless station with unstable connection.
Short Preamble	If user enables Short Preamble, performance might slightly improve. However, the compatibility with wireless LAN card when connecting could decrease. It is recommended to disable Short Preamble for best compatibility.
RTS Threshold	When a data is larger than the threshold size, it can be sent RTS/CTS. Smaller threshold size may enable more stable wireless communication; however the maximum speed is lower. Smaller threshold size is recommended in case of more wireless stations are connected at the same time. The setting range is 1~2347.
Fragmentation	When a data is larger than the threshold size, it is fragmented and sent. Smaller

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

Threshold	threshold size may enable more stable wireless communication; however the maximum speed is lower. Smaller threshold size is recommended in case of many interruptions from surrounding signals. The setting range is 256~2346.
BG Protection	Setting for wireless communication when using both 11b and 11g LAN cards. Recommended for automatic settings in general.
Beacon Interval	Controls the interval of sending beacon. The setting range is 20~999 and 100ms is usually used.
Country Code	Setting for country code. Example: KR(Republic of Korea), US(United State), FCC(Europe), JP(Japan), FR(France), ES(Spain)
WMM (Wi-Fi Multimedia)	Decide whether or not to use WMM function.
DLS	Decide whether or not to use DLS (Direct Link Setup) function.

2.4.2.2. Advanced Wireless Settings (Client Mode)

◆ Set Station advanced configurations in station mode.

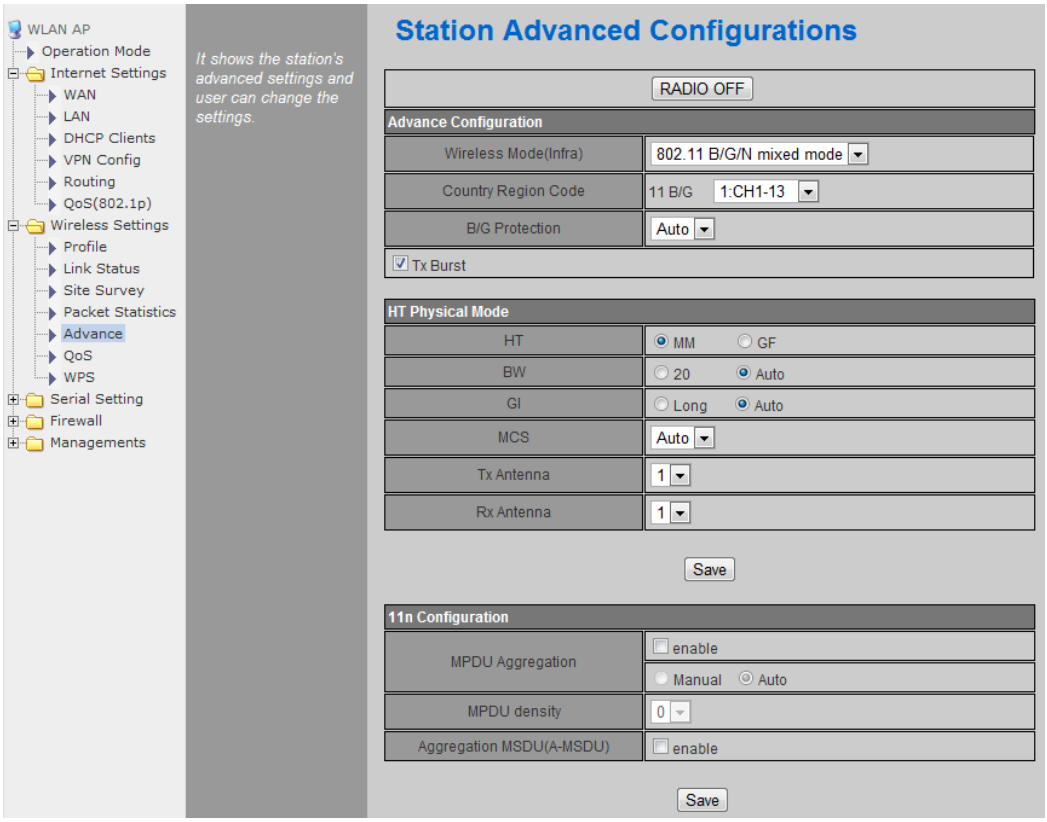

Type	Description
RADIO OFF	Enable / Disable wireless LAN.. User cannot use wireless LAN if user clicks RADIO OFF.
Wireless Mode	Selects wireless mode.
Country Region Code	Selects the country / regional code.
B/G Protection	Setting for better wireless communication when both 11b and 11g LAN cards are used.

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

	We recommend Auto.
HT	Select whether the PHY Mode of wireless to be Mixed Mode or GreenField Mode.
BW	Fix the channel bandwidth to 20MHz: 20MHz. 20/40MHz: Use 40MHz when wireless station that supports 11n channel bonding.
GI	Long: 800nsec, short: 400nsec
MCS	Controls link rate.
Tx Antenna	Select number of Tx antenna in 2T2R system.
Rx Antenna	Select number of Rx antenna in 2T2R system.
MPDU Aggregation	Aggregates multiple MPDU to a single MPDU.
MPDU density	MPDU Variable Factor
Aggregation MSDU (A-MSDU)	Aggregates multiple MPDU to a single MPDU.

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

2.4.3. Wireless Security

◆ This chapter is about settings for wireless network security

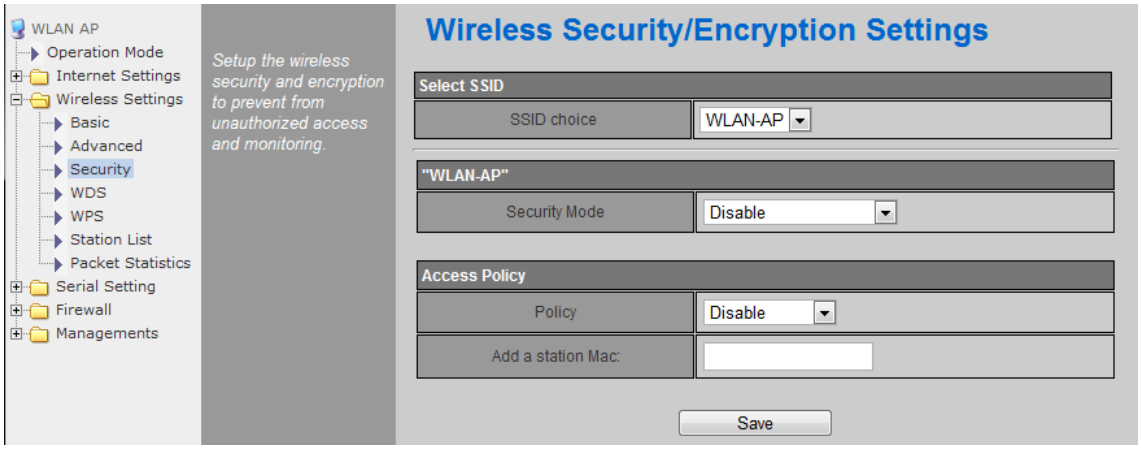

Type	Description
SSID choice	If multiple SSID are in use, choose the corresponding SSID for security.
Security Mode	Select security mode.
Access Policy	Disable : Access Control function will be disabled.. Allow Listed : allows communication with listed MAC client. Reject Listed: blocks communication with listed MAC client.
Add a station MAC	Enter the client's MAC address for controlling.

2.4.3.1. Wireless Security setting

◆ Authentication settings

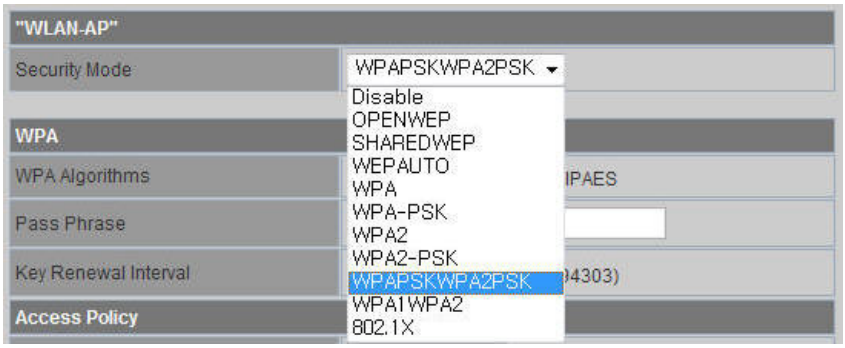

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

Type	Description
OPENWEP	All users are authorized.
SHAREDWEP	Users only with correct network key are authorized.
WEPAUTO	OPEN/SHARED Mode is selected automatically.
WPA-PSK	WPA certified standard with improved security.
WPA2-PSK	Improved WPA certified standard
WPAPSKWPA2PSK	Both WPZ-PSK and WPZ2-PSK are supported.
WPA	WPA certified standard including 802.1x.
WPA2	Improved WPA certified standard.
WPA1WPA2	Both WPA and WPA2 are supported.
802.1x	Radius authentication through WEP Key.

2.4.3.2. Wireless Authentication Setting

Encryption	Type	Description
None	OPEN	Encryption algorithm is not used.
WEP64	SHARED/ WEPAUTO/802.1x	WEP encryption algorithm is used with 64bit key.
WEP128		WEP encryption algorithm is used with 128 bit key.
TKIP	WPA/WPA2/ WPA-PSK/ WPA2-PSK/ WPA1WPA2/ WPAPSKWPA2PSK	More complex encryption algorithm than WEP Is used.
AES		New encryption algorithm is used.
TKIP/AES		Support TKIP/AES simultaneously

2.4.3.2.1. WEP

- ◆ Enter key for WEP64 or WEP128 network.
- ◆ Use either character string or hex character when entering key.
- ◆ Select 1~4 for 'Default Key..
- ◆ Enter at least one WEP Key.
- ◆ The entered WEP key is used for connection from wireless terminal.

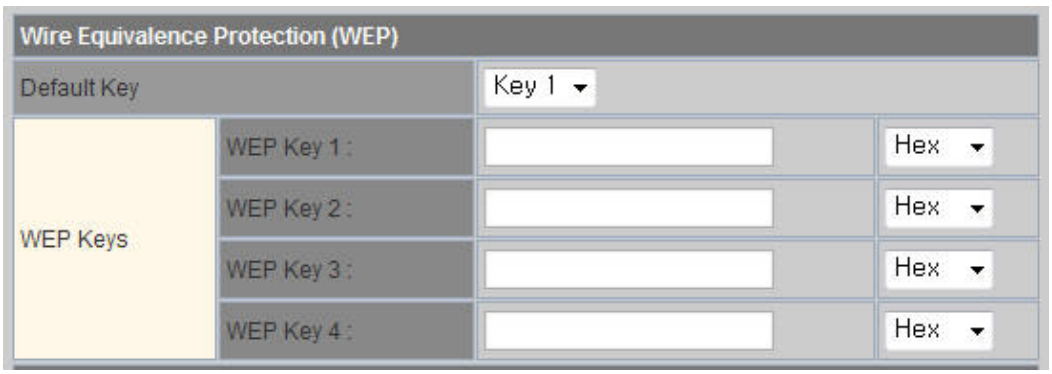

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

2.4.3.2.2. TKIP/AES authentication

◆ Enter at least 8 characters of character string for the network key value.

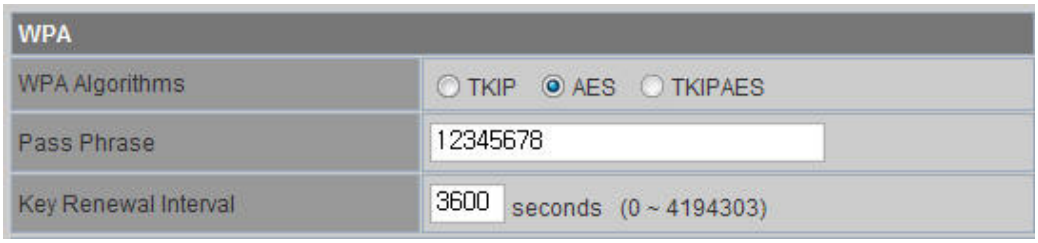

2.4.3.2.3. Wireless 802.1x authentication

◆ Enter the value for linking with the Radius Server.

◆ The values related to the Radius Server are provided by the internet service company.

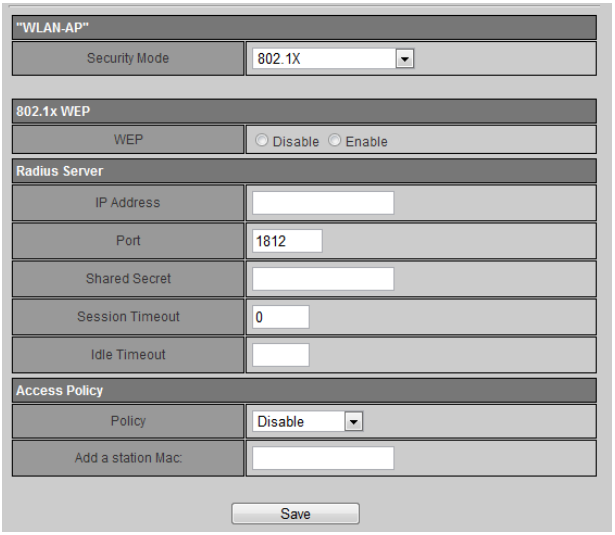

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

2.4.4. WDS(Wireless Distribution System) Setting

- ◆ Connection with different AP is possible with WDS (Wireless Distribution System) function.
- ◆ Maximum of four APs can connect through WDS function.
- ◆ 2 APs must use the same channel and authentication / encryption method

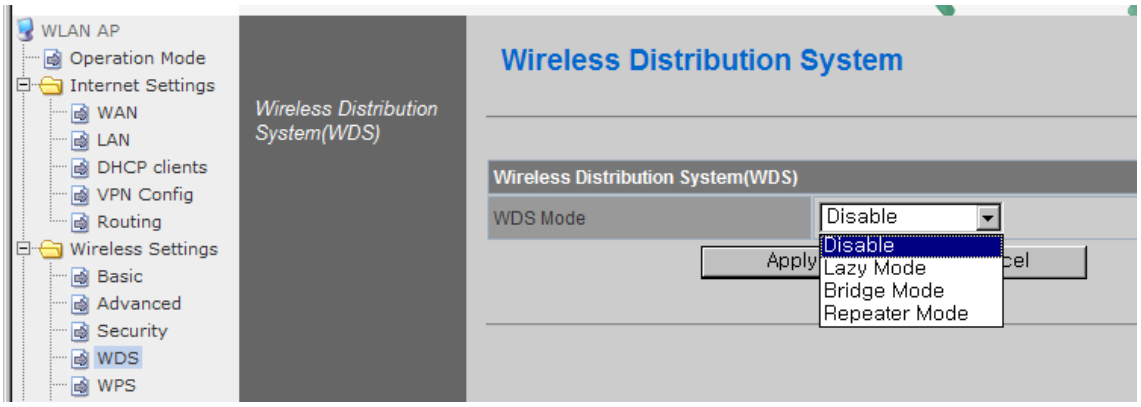

Type	Description
Disable	WDS function is not used. (Default disable)
Lazy Mode	Do not register the MAC of AP to be connected. Connect the AP's MAC to the registered AP. AP function is provided.
Bridge Mode	Register the MAC of AP to be connected. Connect the registered MAC to the AP. AP function is not provided.
Repeater Mode	Register the MAC of AP to be connected. Connect the registered MAC to the AP. AP function is provided. (The performance of WDS is best in Repeater Mode.)

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

2.4.5. WPS Setting

2.4.5.1. WPS Setting (AP Mode)

◆ Only work at the AP Mode, Gateway Mode and AP-Client Mode

◆ The WPS function enables easier wireless network setting.

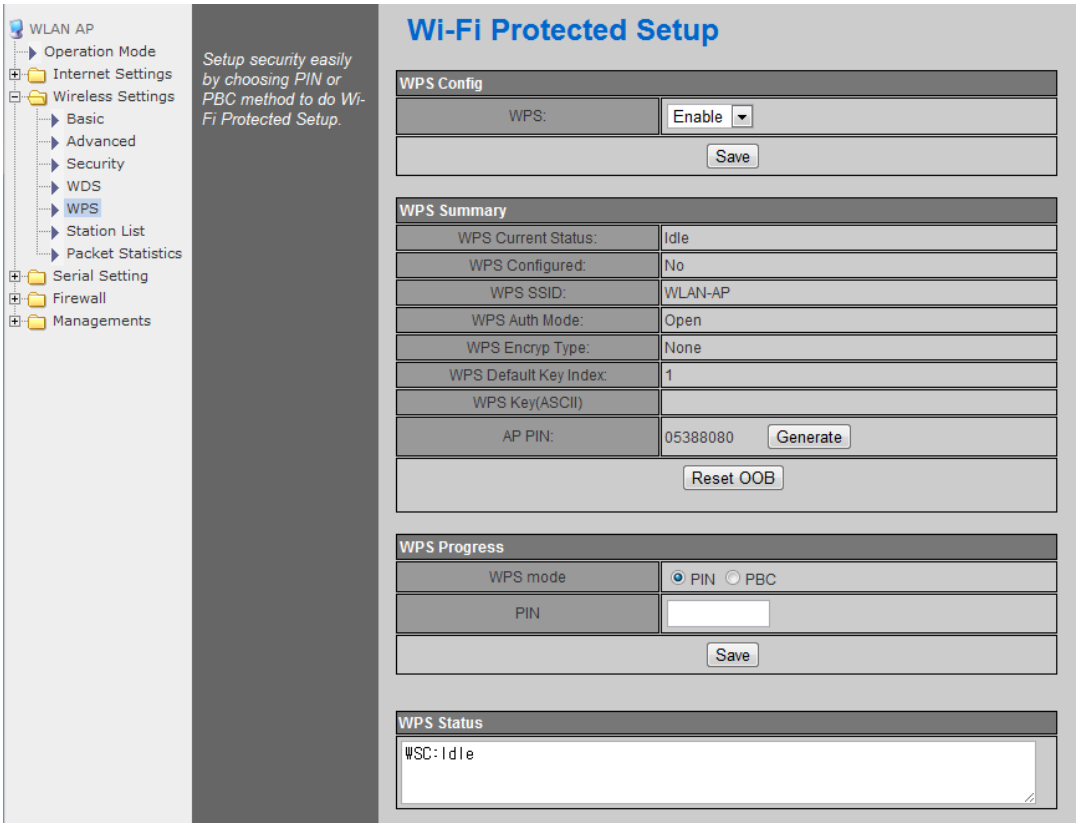

Type	Description
WPS	Enable / Disable WPS.
WPS Current Status	Shows whether WPS is used or not for the connection with station.
WPS Configured	Shows whether WPS is configured or not.
WPS SSID	Shows the SSID connected to the station.
WPS Auth Mode	Shows the authentication used with WPS.
WPS Encrypt Type	Shows the Encryption used with WPS.
WPS Default Key Index	Shows the default key ID used with WPS.
WPS Key(ASCII)	Shows the WPS Key.
AP PIN	Shows the PIN value used when connecting to station.
WPS Mode	Select PIN or PBC.

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

2.4.5.2. WPS Settings (Client Mode)

◆ WPS settings in Station Mode.

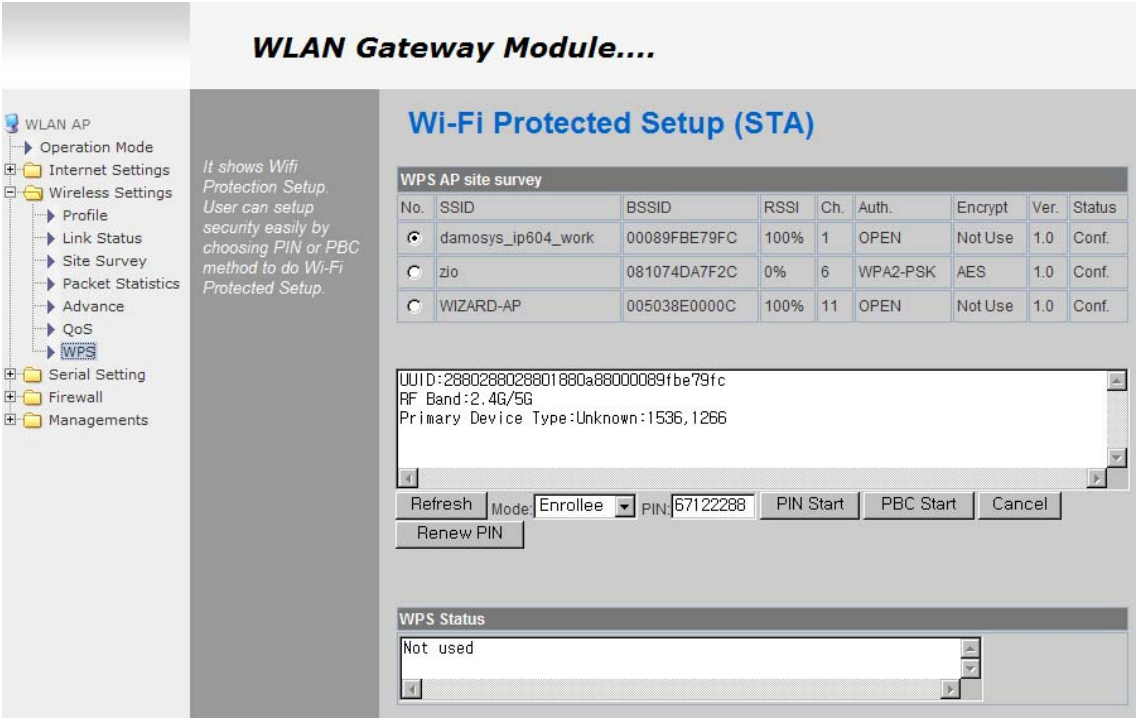

Type	Description
Refresh	Searches for WPS function activated AP.
PIN Start	Attempts connection with AP using PIN value.
PBC Start	Attempts connection with AP by virtually clicking the PBC button.
Cancel	Cancels the AP connection attempt.
Renew PIN	Renews the PIN value of WizFi630.

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

2.4.6. Wireless network status

◆ The status of the station that is connected to WizFi630 is shown.

◆ The surrounding wireless AP's status are shown.

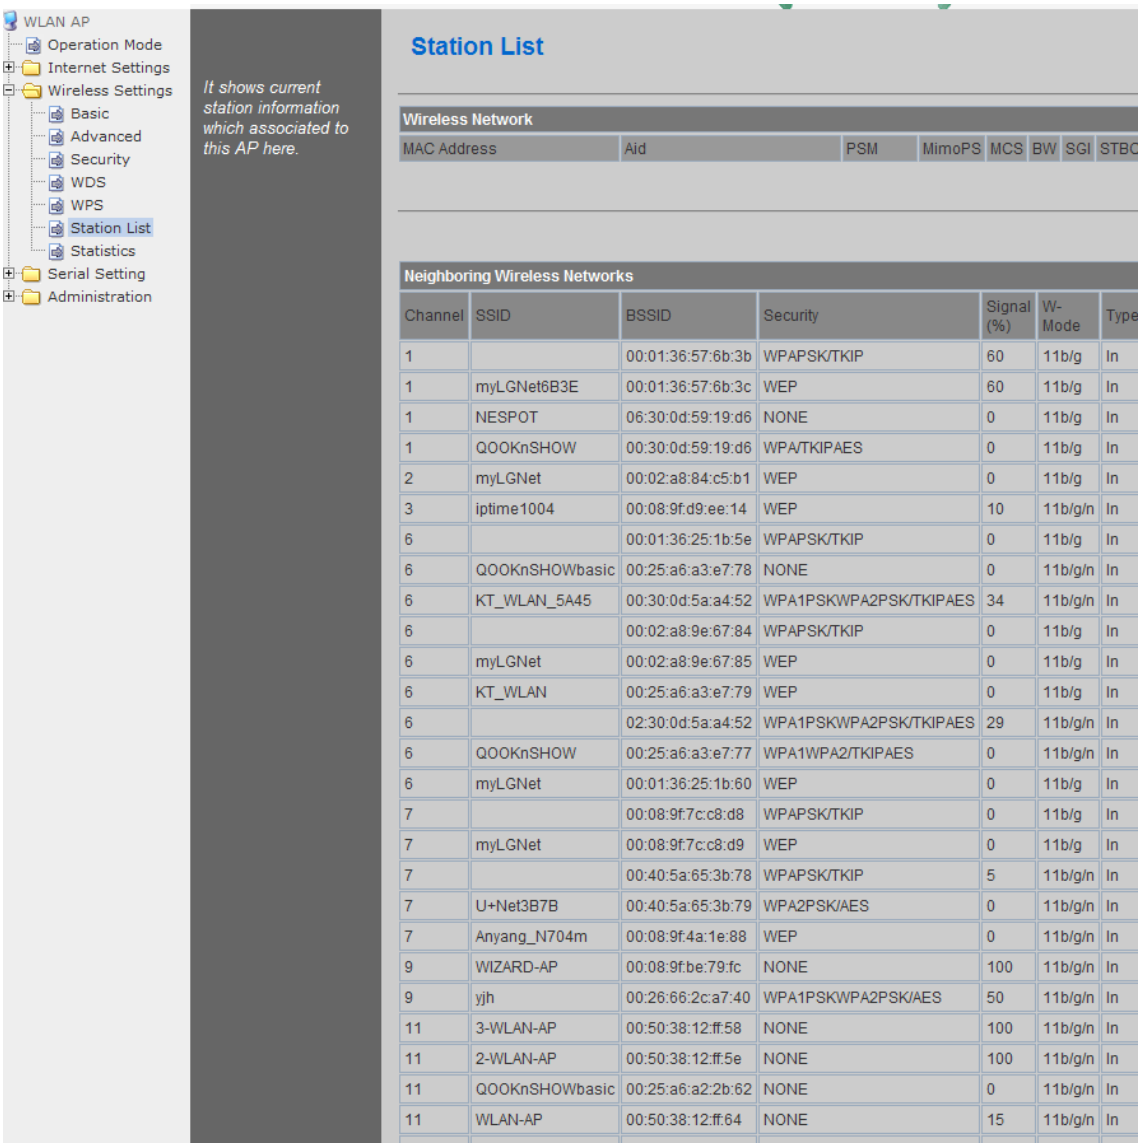
WLAN AP
Operation Mode
Internet Settings
Wireless Settings
Basic
Advanced
Security
WDS
WPS
Station List
Statistics
Serial Setting
Administration
It shows current station information which associated to this AP here.
Station List
Wireless Network
MAC Address
Aid
PSM
MimoPS
MCS
BW
SGI
STBC
Neighboring Wireless Networks
Channel
SSID
BSSID
Security
Signal (%)
W-Mode
Type
1 00:01:36:57:6b:3b WPAPSK/TKIP 60 11b/g In
1 myLGNet6B3E 00:01:36:57:6b:3c WEP 60 11b/g In
1 NESPOT 06:30:0d:59:19:d6 NONE 0 11b/g In
1 QOOKnSHOW 00:30:0d:59:19:d6 WPA/TKIPAES 0 11b/g In
2 myLGNet 00:02:a8:84:c5:b1 WEP 0 11b/g In
3 iptime1004 00:08:9f:d9:ee:14 WEP 10 11b/g/n In
6 00:01:36:25:1b:5e WPAPSK/TKIP 0 11b/g In
6 QOOKnSHOWbasic 00:25:a6:a3:e7:78 NONE 0 11b/g/n In
6 KT_WLAN_5A45 00:30:0d:5a:a4:52 WPA1PSKWPA2PSK/TKIPAES 34 11b/g/n In
6 00:02:a8:9e:67:84 WPAPSK/TKIP 0 11b/g In
6 myLGNet 00:02:a8:9e:67:85 WEP 0 11b/g In
6 KT_WLAN 00:25:a6:a3:e7:79 WEP 0 11b/g In
6 02:30:0d:5a:a4:52 WPA1PSKWPA2PSK/TKIPAES 29 11b/g/n In
6 QOOKnSHOW 00:25:a6:a3:e7:77 WPA1WPA2/TKIPAES 0 11b/g/n In
6 myLGNet 00:01:36:25:1b:60 WEP 0 11b/g In
7 00:08:9f:7c:c8:d8 WPAPSK/TKIP 0 11b/g In
7 myLGNet 00:08:9f:7c:c8:d9 WEP 0 11b/g In
7 00:40:5a:65:3b:78 WPAPSK/TKIP 5 11b/g/n In
7 U+Net3B7B 00:40:5a:65:3b:79 WPA2PSK/AES 0 11b/g/n In
7 Anyang_N704m 00:08:9f:4a:1e:88 WEP 0 11b/g/n In
9 WIZARD-AP 00:08:9f:be:79:fc NONE 100 11b/g/n In
9 yjh 00:26:66:2c:a7:40 WPA1PSKWPA2PSK/AES 50 11b/g/n In
11 3-WLAN-AP 00:50:38:12:ff:58 NONE 100 11b/g/n In
11 2-WLAN-AP 00:50:38:12:ff:5e NONE 100 11b/g/n In
11 QOOKnSHOWbasic 00:25:a6:a2:2b:62 NONE 0 11b/g/n In
11 WLAN-AP 00:50:38:12:ff:64 NONE 15 11b/g/n In

Type	Description
Channel	Channel information of AP
SSID	SSID of AP
BSSID	MAC address of AP
Security	Encryption method of AP
Signal	Signal strength with AP
W-Mode	Wireless mode of AP
Type	Network Type of finding AP In: Infrastructure, Ad: ad-hoc

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

2.4.7. AP Wireless Statistics

◆ The Statistics of wireless communication is shown.

2.4.7.1. AP Wireless Statistics (AP Mode)

◆ Only work at the AP Mode, Gateway Mode and AP-Client Mode

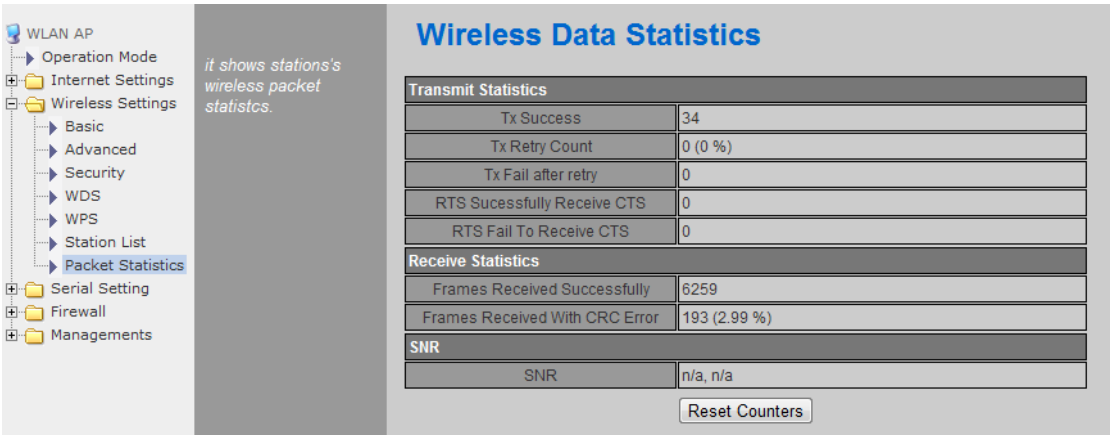

Type	Description
Tx Success	Number of successfully transmitted frames
Tx Retry Count	Number of retransmitted frames
Tx Fail after retry	Number of failed frames
RTS Successfully Receive CTS	Number of frames that successfully received CTS
RTS Fail To Receive CTS	Number of frames that failed to receive CTS
Frames Receive Successfully	Number of frames successfully received
Frames Received With CRC Error	Number of frames that failed due to CRC error
SNR	Receiving signal strength

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

2.4.7.2. AP Wireless Statistics (Client Mode)

◆ Station statistics shows the information of wireless data packet in station mode.

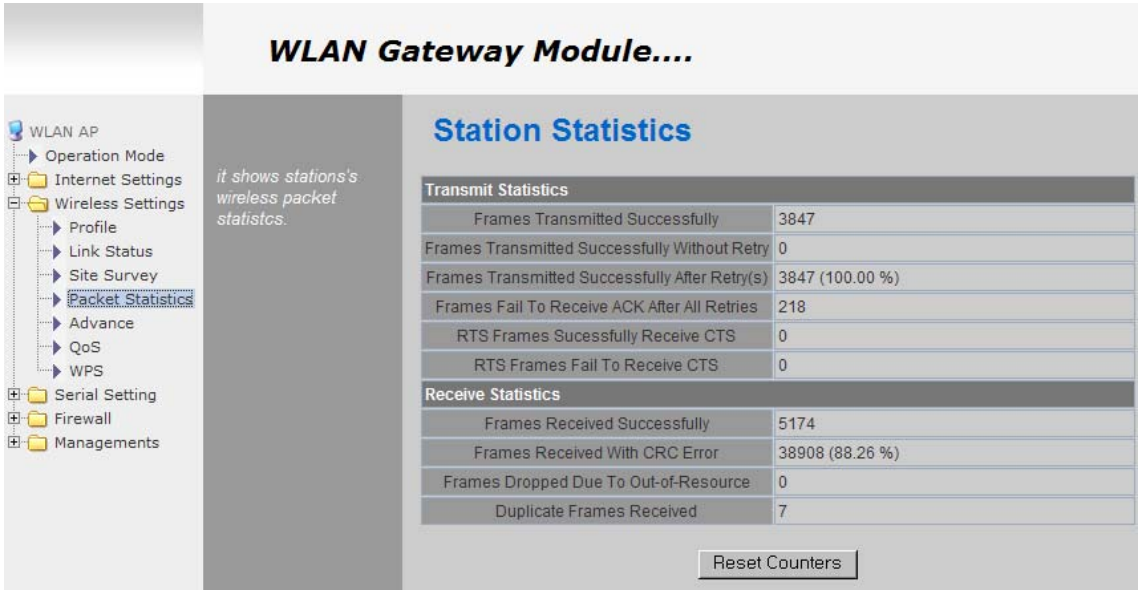

Type	Description
Frames Transmitted Successfully	Number of frames successfully transmitted.
Frames Transmitted Successfully Without Retry	Number of frames successfully transmitted without a retry.
Frames Transmitted Successfully After Retry(s)	Number of frames transmitted successfully after retry.
Frames Fail To Receive ACK After All Retries	Number of frames failed to receive ACK after all retries.
RTS Frames Successfully Receive CTS	Number of RTS frames that successfully received CTS
RTS Frames Fail To Receive CTS	Number of RTS frames failed to receive CTS.
Frames Received Successfully	Number of frames successfully received.
Frames Received With CRC Error	Number of frames received with CRC error.
Frames Dropped Due To Out-of-Resources	Number of frames dropped due to out of resources.
Duplicate Frames Received	Number of duplicate frames received.

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

2.4.8. Station QoS/DLS(Direct Link Setup) Configurations

◆ Set Station QoS / DLS configurations in station mode

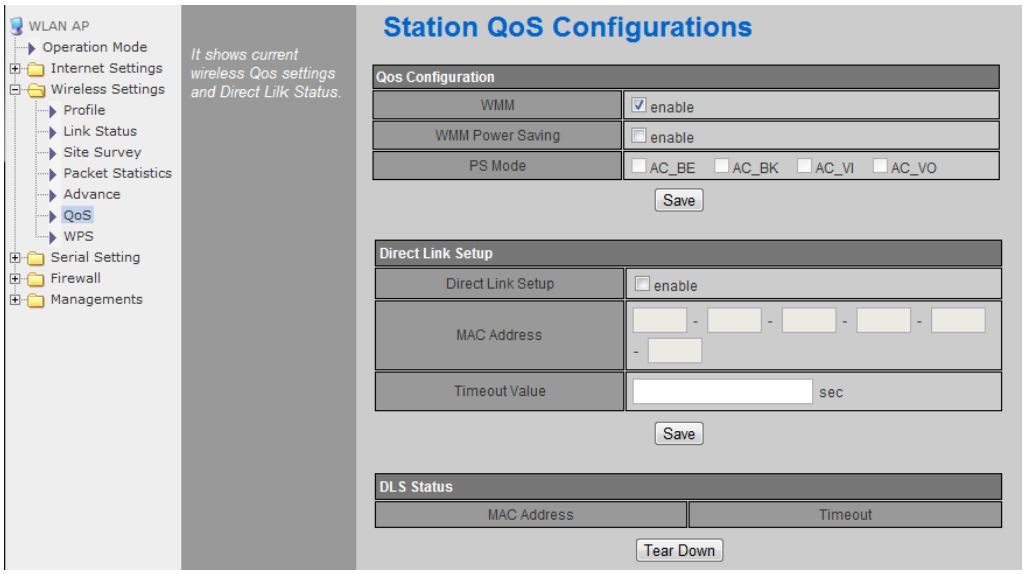

Type	Description
WMM(Wi-Fi Multimedia)	Enable WMM function or not.
WMM Power Saving	Enable Power Saving function or not.
Direct Link Setup	Enable Direct Link function or not. In order to use Direct Link function, the AP connected to WizFi630 and the Station to be connected must support Direct Link function.
MAC Address	Enter the MAC Address of the station to be connected using direct link function.
Timeout Value	Cancels the link if there are no traffic between stations for a period of time.

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

2.4.9. Profile

◆ Shows the profile of the connected AP.

The profile information can be modified.

By using "Site Survey", it is very convenient to find and connect with an AP.

◆ Administration of maximum of two AP is possible after adding to profile.

◆ The module automatically connects to the active AP (selected AP) upon booting.

Type	Description
Profile	Profile Name
SSID	SSID of AP to be connected
Channel	Channel information of AP to be connected. Channel information is needed only when connecting with ad-hoc.
Authentication	Authentication method of AP to be connected.
Encryption	Encryption method of AP to be connected.
Network Type	Select AP / ad-hoc.

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

2.4.10.Link Status

◆ Shows the link status between wireless LAN and AP.

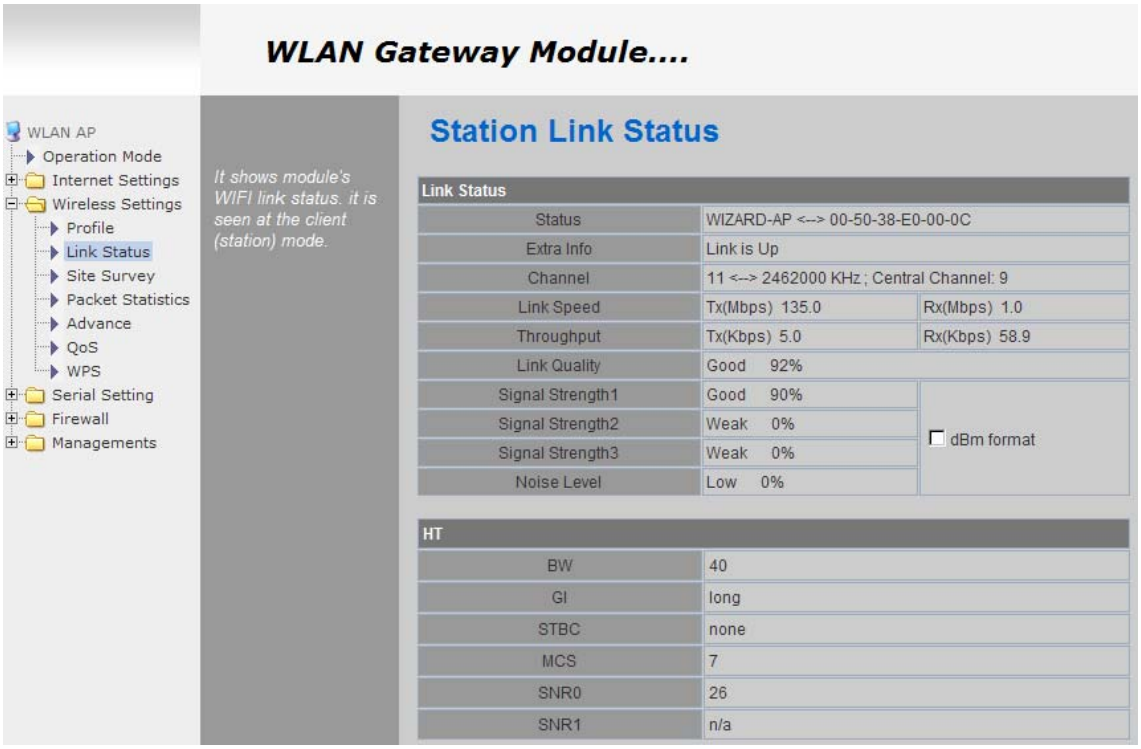

Type	Description
Status	SSID and BSSID of connected AP.
Extra Info	Link status.
Channel	Channel information of connected AP.
Link Speed	Link speed rate of connected AP.
Throughput	Real performance through communication.
Link Quality	Link quality of connected AP.
Signal Strength	Signal strength of connected AP.
Noise Level	Noise level of connected AP.

◆ The HT section only appears when connected with 802.11n AP.

Type	Description
BW	Channel Bandwidth. 20MHz or 40MHz.
GI	Guard Interval Long: 800nsec, Short: 400nsec
STBC	Supported only when value of MCS is 0-7.
MCS	Shows link rate.
SNR	Shows the receiving signal strength.

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

2.4.11.Site Survey

- ◆ Site Survey searches for AP surrounding WizFi630.
- ◆ Select an AP and click the connect button (If the module is rebooted, the module will connect to the previous profile).
- ◆ Click "Add Profile" if user wishes to add to profile.

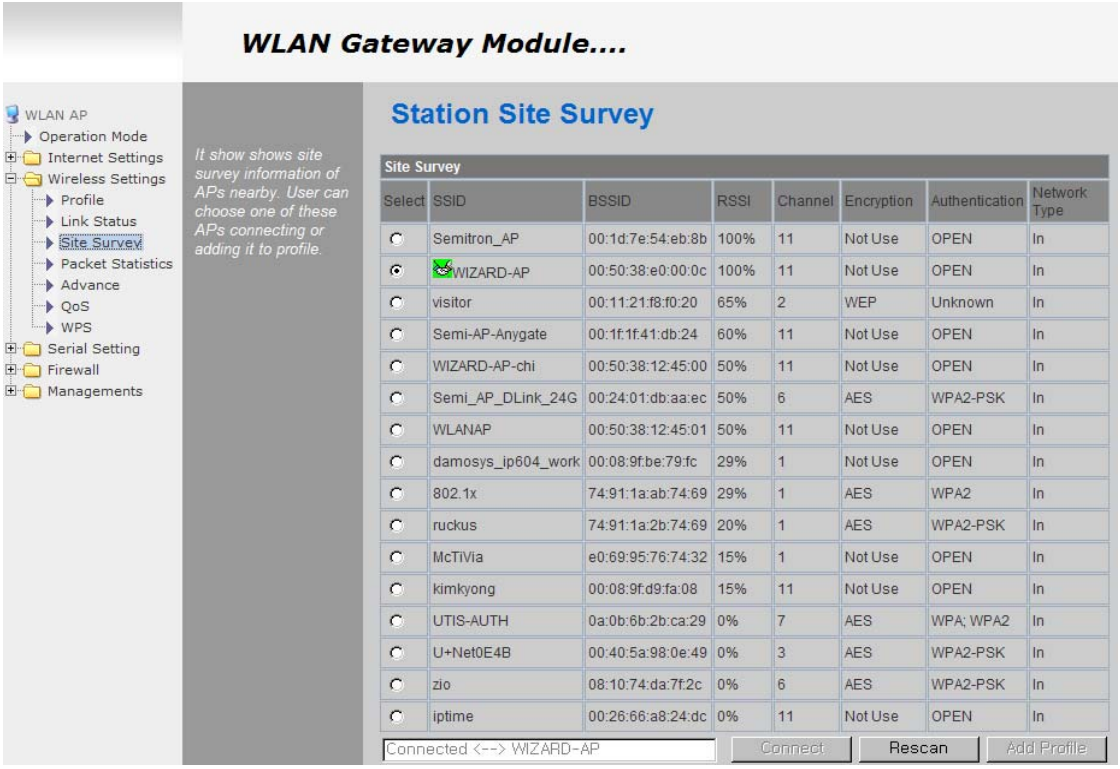
WLAN Gateway Module....
WLAN AP
Operation Mode
Internet Settings
Wireless Settings
Profile
Link Status
Site Survey
Packet Statistics
Advance
QoS
WPS
Serial Setting
Firewall
Managements
It show shows site survey information of APs nearby. User can choose one of these APs connecting or adding it to profile.
Station Site Survey
Site Survey
Select SSID BSSID RSSI Channel Encryption Authentication Network Type
Semitron_AP 00:1d:7e:54:eb:8b 100% 11 Not Use OPEN In
WIZARD-AP 00:50:38:e0:00:0c 100% 11 Not Use OPEN In
visitor 00:11:21:f8:f0:20 65% 2 WEP Unknown In
Semi-AP-Anygate 00:1f:1f:41:db:24 60% 11 Not Use OPEN In
WIZARD-AP-chi 00:50:38:12:45:00 50% 11 Not Use OPEN In
Semi_AP_DLink_24G 00:24:01:db:aa:ec 50% 6 AES WPA2-PSK In
WLANAP 00:50:38:12:45:01 50% 11 Not Use OPEN In
damosys_ip604_work 00:08:9f:be:79:fc 29% 1 Not Use OPEN In
802.1x 74:91:1a:ab:74:69 29% 1 AES WPA2 In
ruckus 74:91:1a:2b:74:69 20% 1 AES WPA2-PSK In
McTiVia e0:69:95:76:74:32 15% 1 Not Use OPEN In
kimkyong 00:08:9f:d9:fa:08 15% 11 Not Use OPEN In
UTIS-AUTH 0a:0b:6b:2b:ca:29 0% 7 AES WPA; WPA2 In
U+Net0E4B 00:40:5a:98:0e:49 0% 3 AES WPA2-PSK In
zio 08:10:74:da:7f:2c 0% 6 AES WPA2-PSK In
iptime 00:26:66:a8:24:dc 0% 11 Not Use OPEN In
Connected <--> WIZARD-AP
Connect
Rescan
Add Profile

Type	Description
SSID	SSID of searched AP
BSSID	Wireless MAC Address of searched AP.
RSSI	Signal strength of searched AP.
Channel	Channel of searched AP.
Encryption	Encryption method of searched AP.
Authentication	Authentication method of searched AP.
Network Type	Network type of searched AP. In: Infrastructure, Ad: ad-hoc
Connected	SSID of AP connected with WizFi630.
Connect	Connects with AP.
Rescan	Rescans for surrounding AP.
Add Profile	Adds to profile.

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

2.4.12.WIFI Multi-Bridge settings

◆ Set WI-FI Multi Bridge Mode in AP-Client mode.

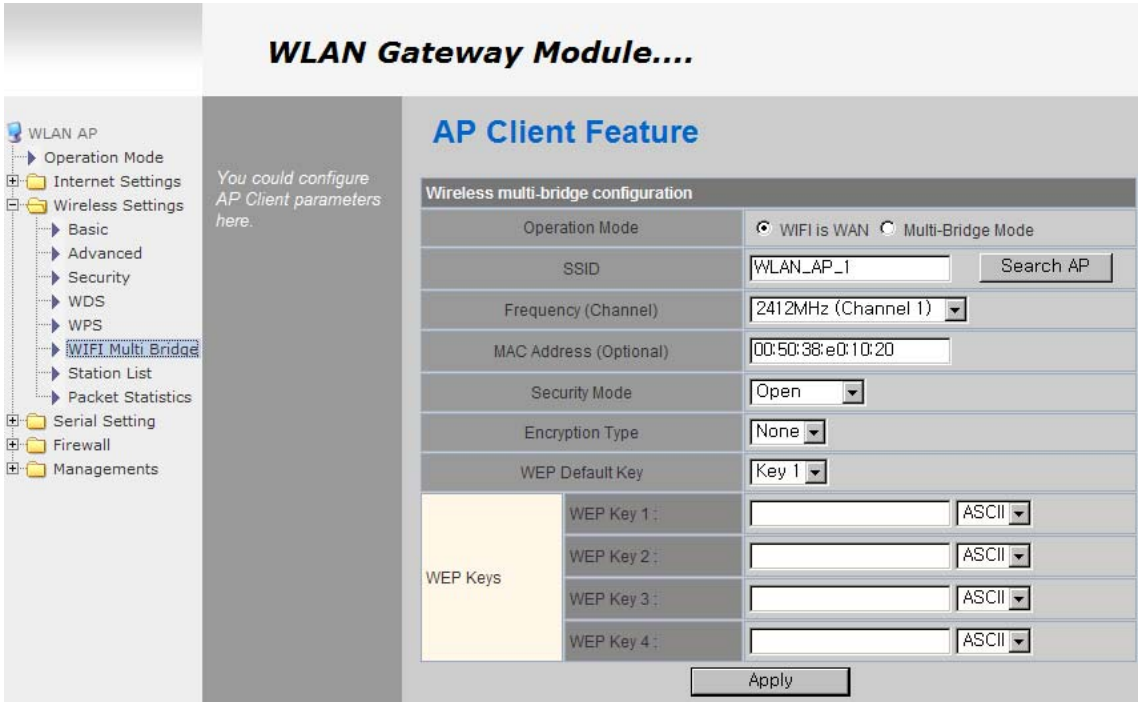

Type	Description
Operation Mode	Select Gateway or Bridge Mode. Wi-Fi is WAN: operates in Gateway Mode. Multi-Bridge Mode: operates in Bridge Mode.
SSID	SSID of AP to be connected.
Frequency (Channel)	Channel of AP to be connected.
MAC Address	MAC Address of AP to be connected. (optional)
Security	Select the same security option with AP to be connected.

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

2.5. Serial to LAN(Wired and Wireless)

- ◆ Individual settings for serial #1 and serial #2 are possible.
- ◆ Set the serial parameters for serial to wireless (Ethernet) function.
- ◆ Set two channels (Main connection, Aux connection) for each serial port
- ◆ Setting management of Serial #1 and #2 (Main connection, Aux connection)

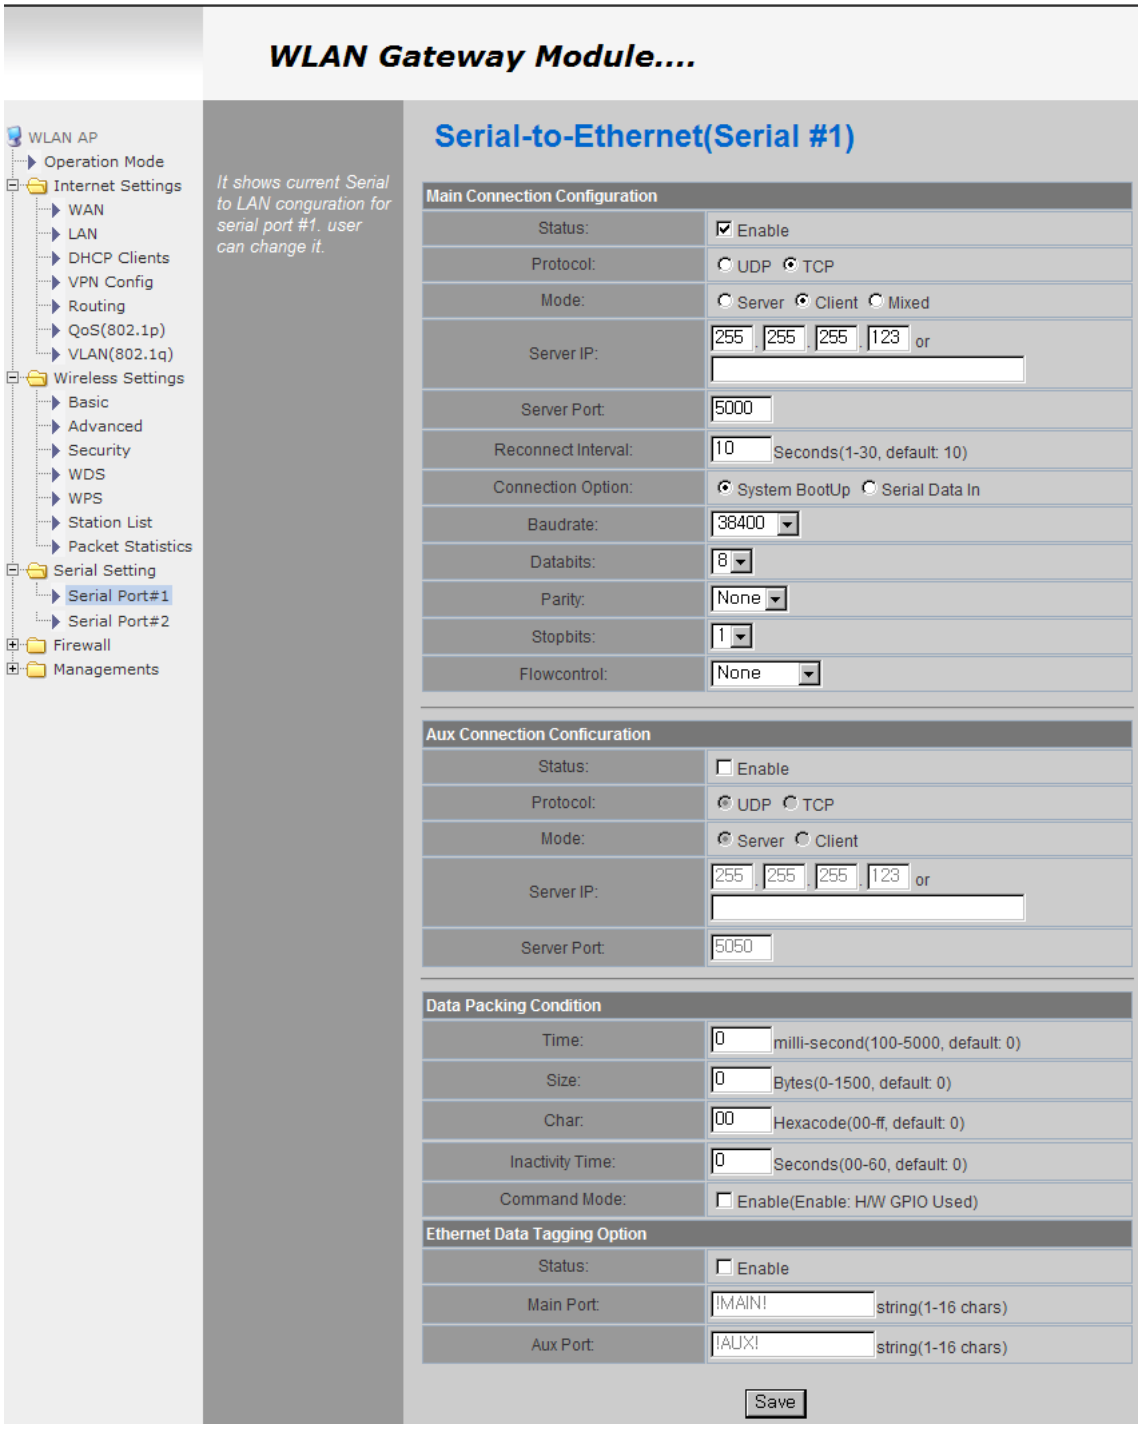

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

2.5.1. Main Connection settings

Type	Description
Status	Enable checked : Serial to LAN is used. Enable un-check: Serial to LAN is not used.
Protocol	Protocol used in Serial to LAN communication -TCP -UDP
Mode	Serial to LAN operation mode. (Client Mode recommended) - Server : waits for connection. - Client : connected to the remote server of WizFi630 - Mixed : not recommended
Server IP	Enter the IP address for WizFi630 setting.
Server Port	Enter the port number for remote serial data server host PC.
Reconnect Interval	Interval of TCP reconnection.
Connection	Connection Type of WizFi630's Serial LAN. (TCP Only) System Bootup : connected to the remote server upon bootup. Serial Data In : once serial data comes in, connect to remote server. (end connection after inactive time)
Baud rate	Select the serial communication speed.
Databits	Select the databits.
Parity	Select the method for parity check.
Stopbits	Select the stopbits.
FlowControl	Select the method for flow control. (Option: none, Xon/Xoff, RTS/CTS)

2.5.2. Aux Connection Settings

Type	Description
Status	Select whether to enable serial port or not.
Protocol	Protocol used in Serial to LAN communication.
Mode	Select Server or Client Mode.
Server IP	Enter the IP address for WizFi630 setting.
Server Port	Enter the port number for remote serial data server host PC.

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

2.5.3. Packing Condition (Incoming serial data packing condition)

Type	Description
Time	Data packing until the set time and then sent to server after the set time.
Size	Data packing until the set size and then sent to the server.
Character	Data packing until the set character and then sent to the server.
Inactivity Time:	TCP/IP connection is discontinued if there is neither serial data nor network data during the set time.
H/W CMD switch	-. Enable/Disable the H/W CMD switch pin. -. H/W CMD switch pin is the switch for sending commands from CPU to WizFi630.

2.5.4. Ethernet Data Tagging Option

This option is used to help serial device to identify who is the received serial data's source; the received serial data comes from Main Port or Aux Port.

Type	Description
Status	Enable or disable this option (Checked : Enable, Un-Check : Disable)
Main Port	Before sending data from Main port to serial port, WizFi630 added a TAG in the front of payload. For example: In-come LAN Data : "abcdegf" Output data to Serial Port : "!MAIN!abcdegf"
Aux Port	Before sending data from Aux port to serial port, WizFi630 added a TAG in the front of payload. For example: In-come LAN Data : "abcdegf" Output data to Serial Port : "!AUX!abcdegf"

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

2.6. Firewall settings

2.6.1. DMZ

- Enable/Disable DMZ function.
- A DMZ allows a single computer on your LAN to expose ALL of its unused ports to the Internet. When doing this, the exposed computer is no longer behind the firewall.
- Sometimes TCP/IP applications require very specialized IP configurations that are difficult to set up or not supported by your router. In this case, placing your computer in the DMZ is the only way to get the application working.

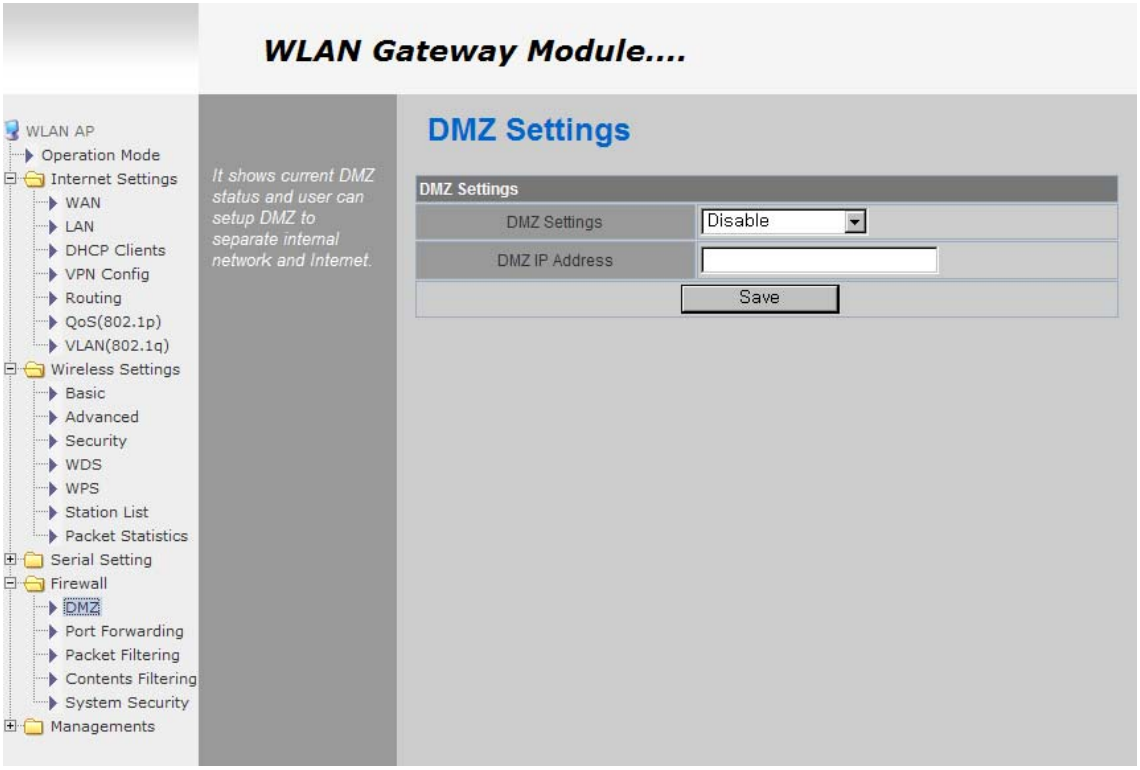

Type	Description
DMZ Settings	Disable/Enable DMZ
DMZ IP Address	Input the IP address that you would like to expose all of its unused ports to the Internet

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

2.6.2. Port forwarding

When a computer on the internet sends data to the external IP address of the router (WizFi630), the router (WizFi630) needs to know what to do with the data. Port Forwarding simply tells the WizFi630 which computer on the local area network to send the data to. When you have port forwarding rules set up, your router takes the data off of the external IP address:port number and sends that data to an internal IP address:port number. Port Forwarding rules are created per port. Thus, a rule set up for port 53 will only work for port 53.

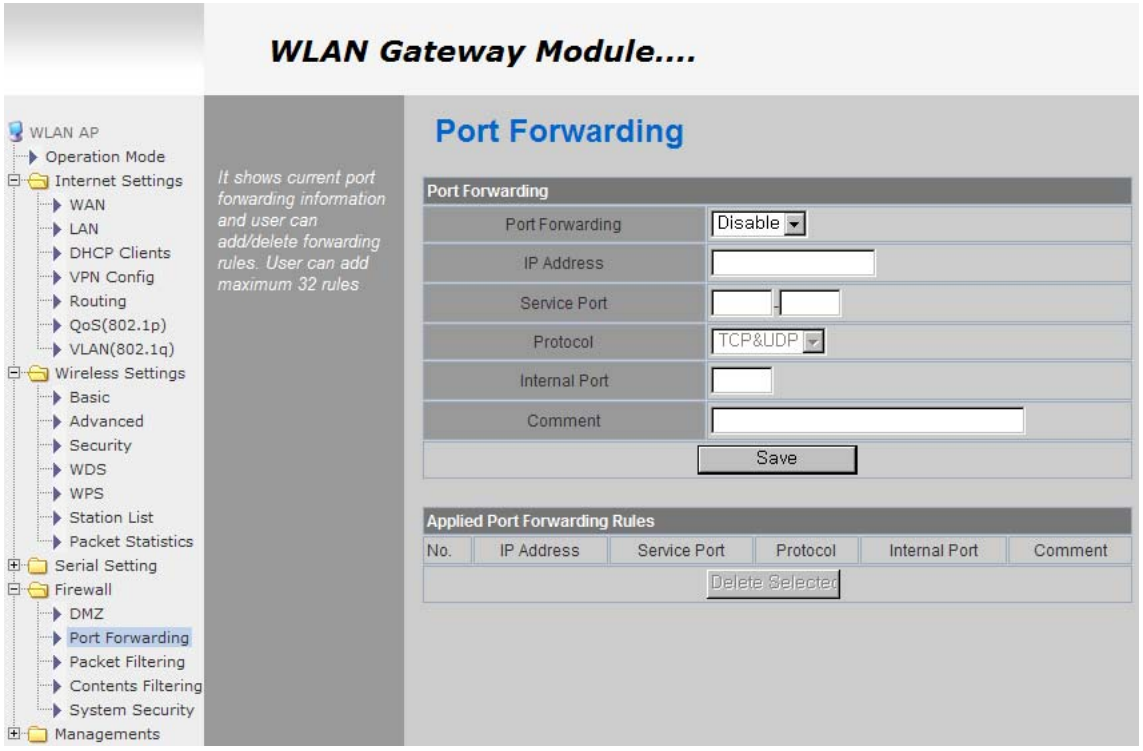

Type	Description
Port Forwarding	Disable/Enable Port Forwarding
IP Address	Internal IP address
Service Port	External ports range
Protocol	Supports TCP and UDP
Internal Port	Internal port

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

2.6.3. Packet filtering

◆ WizFi630 can accept or block Internet packets according to pre-defined MAC or IP address

◆ First, please do the basic settings

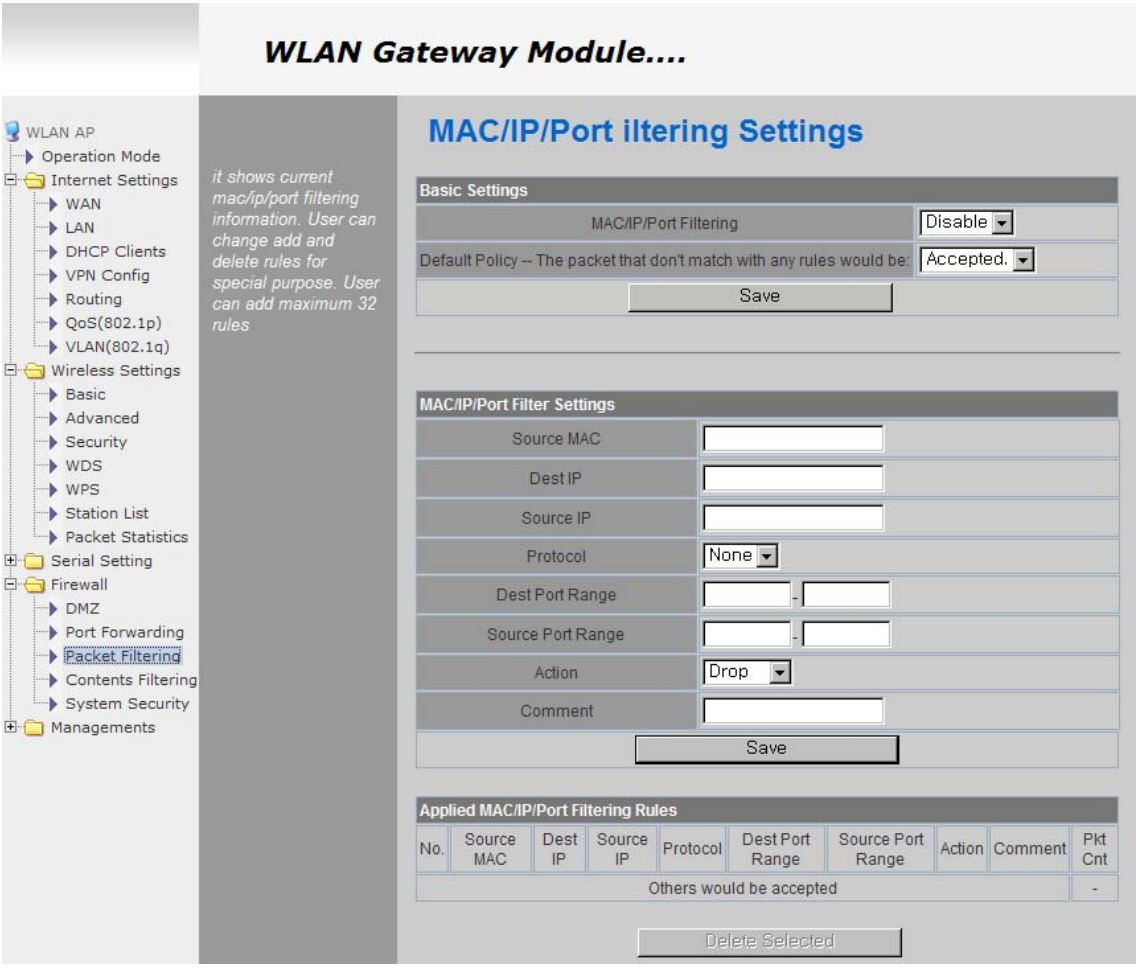

Type	Description
Source MAC	Pre-defined source MAC address for MAC filtering function
Dest IP Address	Destination IP address
Source IP Address	Source IP address
Protocol	Supports TCP, UDP, ICMP
Dest Port Range	Destination port range
Source Port Range	Source port range
Action	Enable/Disable MAC/IP/Port filtering function

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

2.6.4. Contents filtering

◆ Used to block certain websites (IP or domain names).

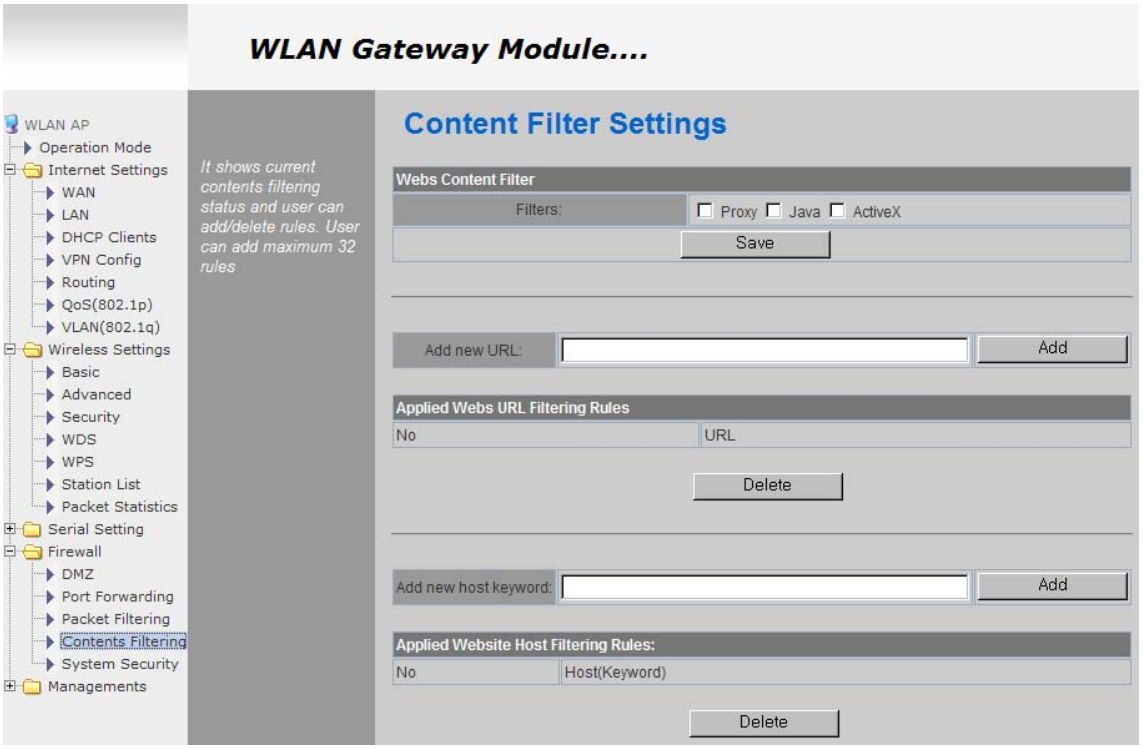

Type	Description
URL Filter	Block all the websites whose domain is the input text For example, if you input "sex", the websites like www.sex.com is blocked. But www.sexgood.com is not blocked. If you would like to block all the websites whose domain name contains the input text, please use Host Filter function
Host Filter	Block all the websites whose domain name contains the input text. For example, if you input "game", the websites like www.hangame.com, www.hangame.co.kr are blocked

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

2.6.5. System Security

◆ Defense from external attack.

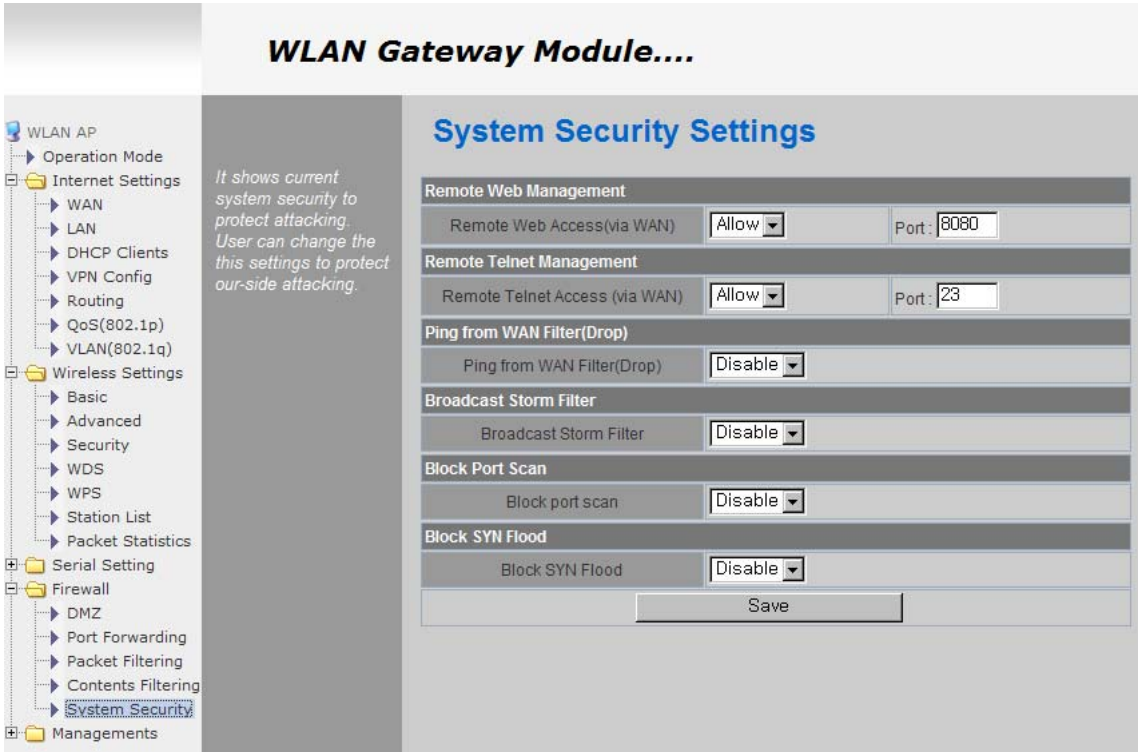

Type	Description
Remote management	Settings about accessing methods from WAN to WizFi630's embedded web server
Telnet management	Settings about accessing methods from WAN to WizFi630's telnet
Ping from WAN Filter	Disable/Enable the WizFi630's Ping response
Broadcast Storm filter	Block/Accept the Broadcast packets
Block Port Scan	Block WizFi630's port-scan function
Block SYN Flood	Block SYN flood

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

2.7. Managements

2.7.1. System Management

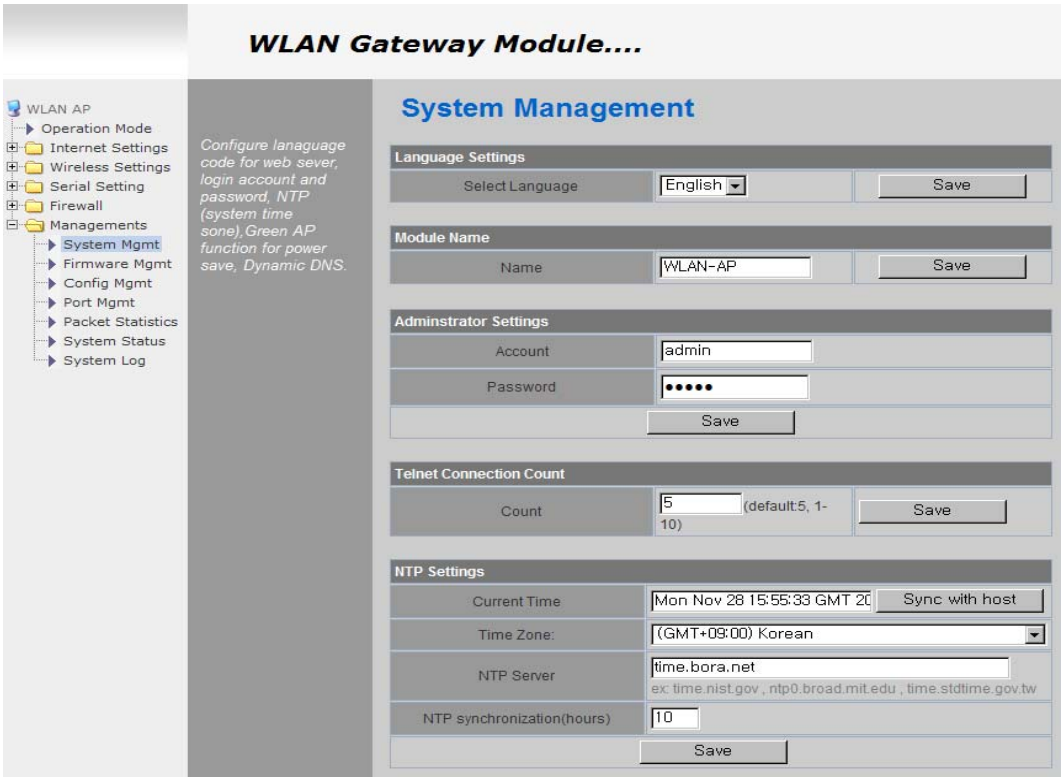

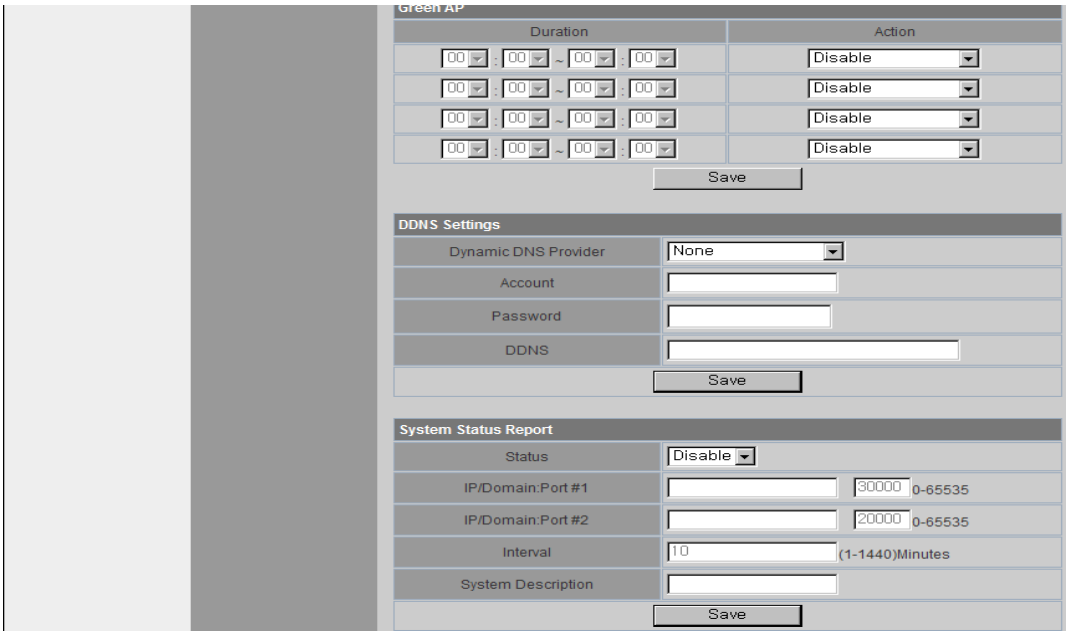

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

Type	Description
Language	Select language in the list
Administrator	Pre-defined ID/Password for webpage or Telnet login
NTP (Network Time Protocol)	Set NTP server
Green AP	Low power consumptive AP
DDNS	Once the DDNS server registers yours MAC address, your device can connect to the internet regardless of your address. DDNS service can be provided by DynDNS, freeDNS, zoneedit, no-ip. To use DynDNS, users should go to www.dyndns.org to create user name and domain name. And then, set related configurations by using WizFi630's webpage. Similarly, to use freeDNS zoneedit, or no-ip,users should go to their homepage first to create user name and domain name. And then, set related configurations by using WizFi630's webpage.
DDNS Provider	DynDNS, freeDNS, zoneedit, no-ip
Account	ID for DDNS.
Password	Password for DDNS
DDNS	Host name for DDNS

2.7.2. Firmware

- ◆ Upgrade firmware and bootloader.
- ◆ WizFi630 do not support upgrading by Remote URL..

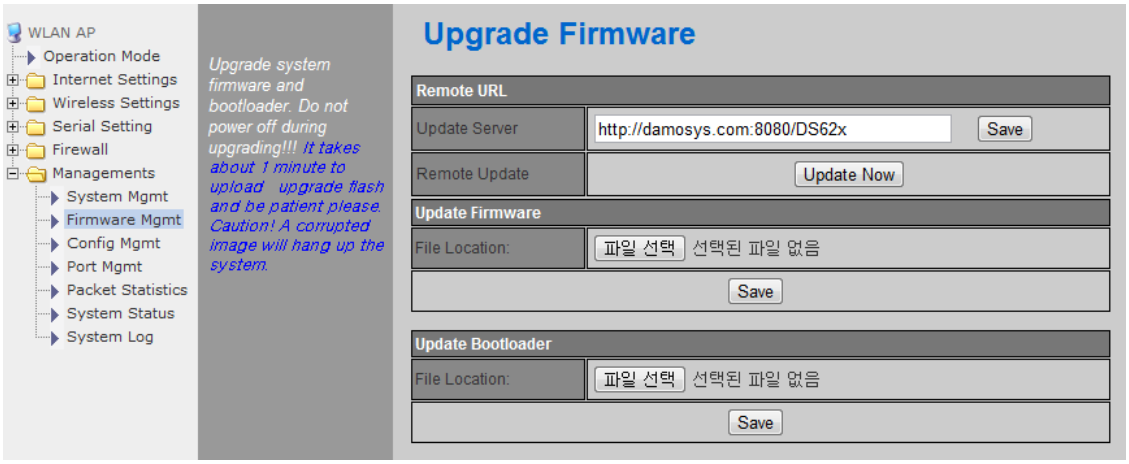

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

2.7.3. Config Settings

◆ Save the setting value of WizFi630 to the PC.

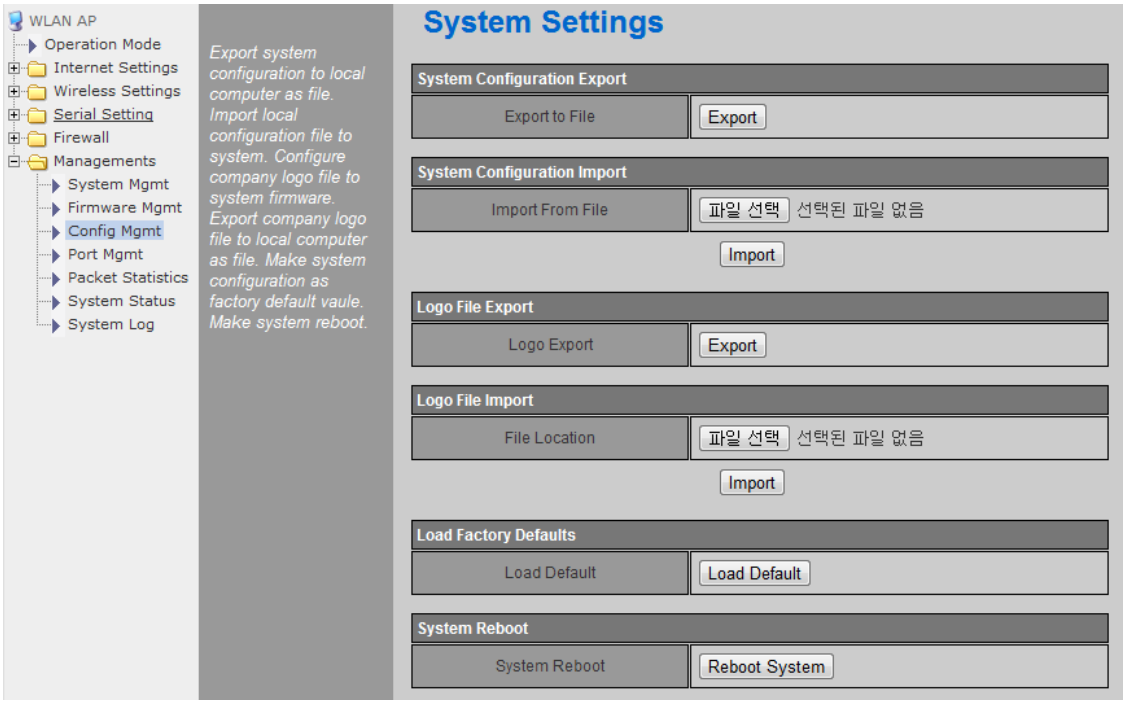

Type	Description
Export Settings	The setting files from the PC file are applied to the module.
Import Settings	The system's setting information is saved as a file in the PC.
Logo Export Settings	User's company logo file is saved in the PC.
Logo Import Settings	User's company logo from the PC is applied to the system. (GIF file size : 10K , 126x42)
Load Factory Defaults	Change the module's setting to default setting.
Reboot	Reboots the system.

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

2.7.4. Port Setting

- ◆ Settings about wired port. In case of Gateway Mode, WAN port is set here
- ◆ In case of Gateway Mode, it is better to use the default WAN port number (Port #0)
- ◆ If you are not the administrator, we do not recommend changing this.

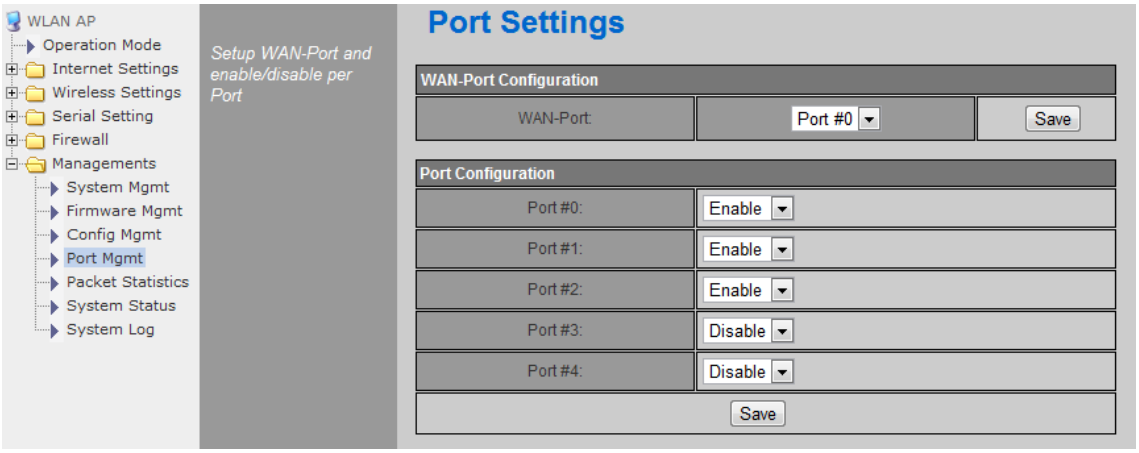

Type	Description
WAN Port	Select the WAN Port in case of Gateway Mode.
Port #0	Enable / Disable Port #0.
Port #1	Enable / Disable Port #1.
Port #2	Enable / Disable Port #2.
Port #3	Enable / Disable Port #3.
Port #4	Enable / Disable Port #4.

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

2.7.5. Packet Statistics

◆ System Statistics shows the system's memory information and system's data transmission size.

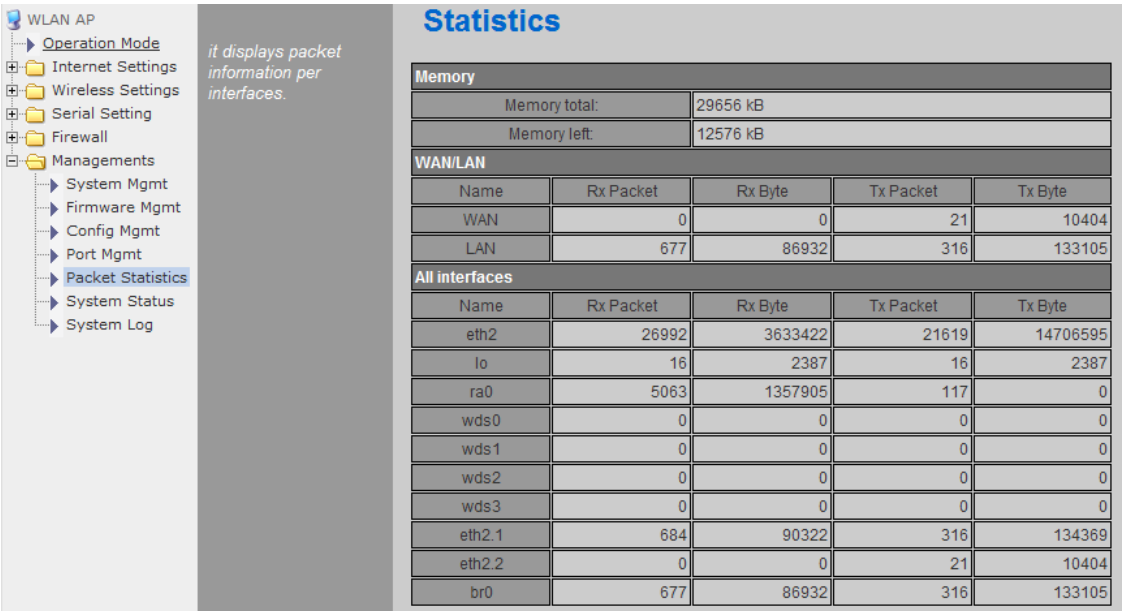

Type	Description
Memory Total	System Memory Size
Memory left	System Free Memory
Rx Packet	Rx Packets counts
Rx Byte	Rx Bytes Counts
Tx Packet	Tx Packet Counts
Tx Byte	Tx Bytes Counts

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

2.7.6. System Status

System Status shows the status of the system, status of the system's network information, and the link status of LAN port.

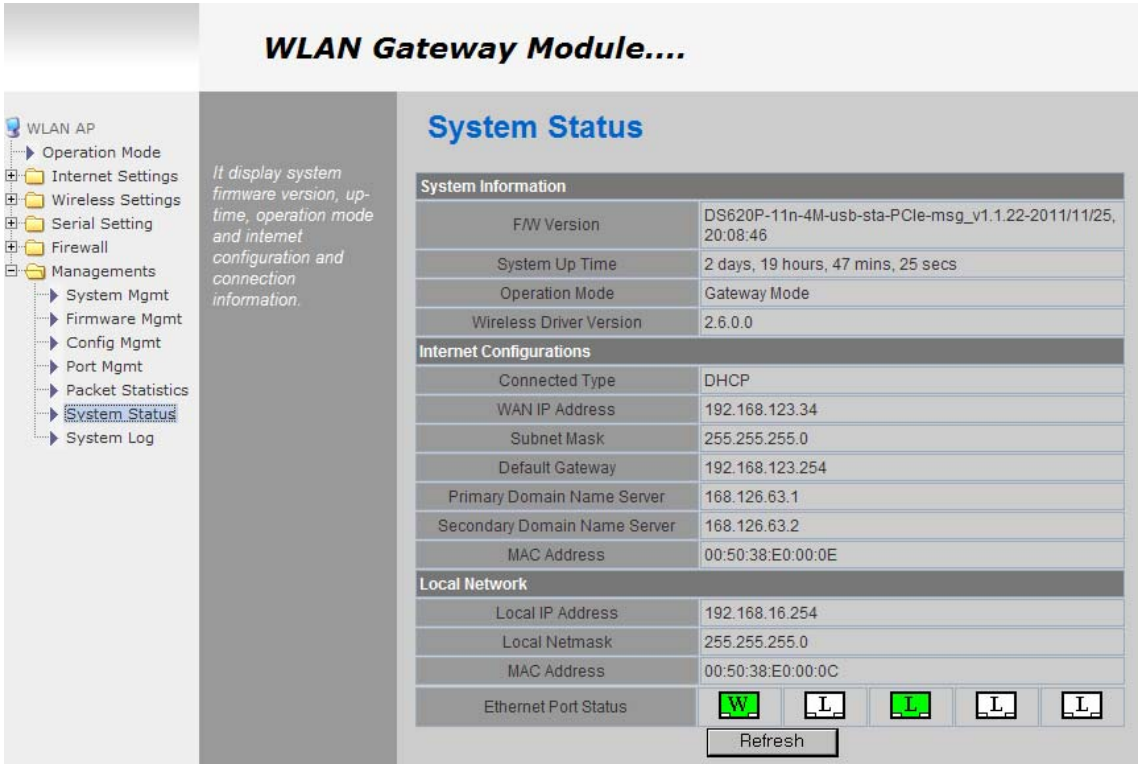

Type	Description
F/W Version	Shows the firmware version.
System Up Time	Shows the system up time.
Operation Mode	Shows the operation mode currently being used.
Internet Configuration	Shows the internet configuration information.
Local Network	Shows the local network information.

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

2.7.7. System Log

◆ The operation history of WizFi630 can be checked by using System Log.

◆ If the system log exceeds 24Kbyte, more recent log record is added.

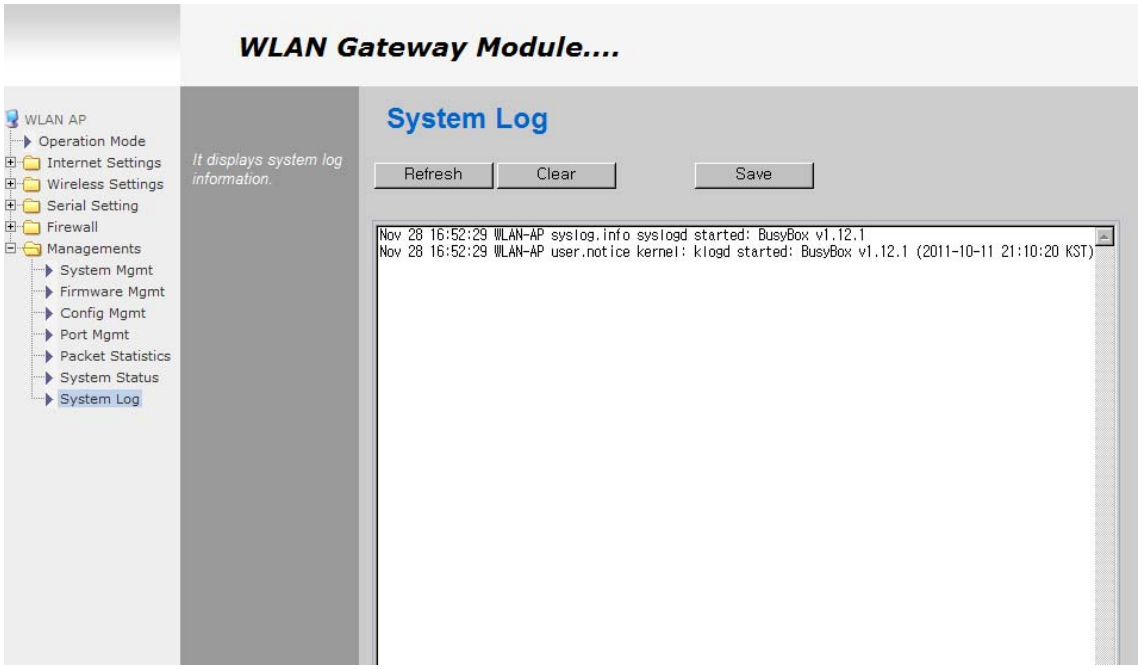

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

3. Hardware Information

3.1. WizFi630 Pin Map

No	T	Name	Shared	Description
1		GND		
2		3.3V		
3		GND		
4		3.3V		
5	I/O, IPD	CTS_N	GPIO9	UART1 CTS-N
6	I/O, IPD	RTS_N	GPIO7	UART1 RTS-N
7	I/O, IPD	RIN	GPIO14	UART1 RIN
8	I/O, IPD	DTR_N	GPIO11	UART1 DTR-N
9	I/O, IPD	RxD	GPIO10	UART1 RXD
10	I/O, IPD	TxD	GPIO8	UART1 TXD
11	I/O, IPD	DSR_N	GPIO13	UART1 DSR-N
12	I/O, IPD	DCD_N	GPIO12	UART1 DCD-N
13	O	WLAN_LED		Wireless Init On/ Active Data:blinking
14		NC		
15	I/O	VBUS		USB OTG VBUS pin;Connect VBUS pin of the USB
16		NC		
17	I/O	PADP		USB OTG data pin Data+
18	I/O, IPD	UART_RX		UART2 RxD
19	I/O	PADM		USB OTG data pin Data-
20	I/O, IPD	UART_TX		UART2 TxD
21	O	TXOP0		10/100 PHY Port #0 TXP
22	I	RXIM0		10/100 PHY Port #0 RXN
23	O	TXOM0		10/100 PHY Port #0 TXN
24	I	RXIP0		10/100 PHY Port #0 RXP
25	I	RXIM1		10/100 PHY Port #1 RXN
26	O	TXOP1		10/100 PHY Port #1 TXP
27	I	RXIP1		10/100 PHY Port #1 RXP
28	O	TXOM1		10/100 PHY Port #1 TXN
29	I	RXIP2		10/100 PHY Port #2 RXP
30	O	TXOM2		10/100 PHY Port #2 TXN
31	I	RXIM2		10/100 PHY Port #2 RXN
32	O	TXOP2		10/100 PHY Port #2 TXP
33	O	LINK_LED_0		LAN port 0 Link LED
34	O	LINK_LED_2		LAN port 2 Link LED
35	O	LINK_LED_1		LAN port 1 Link LED
36	I/O, IPD	GPIO0		WPS Button Push
37	I, IPU	CPURST_N		
38	I/O, IPD	EJT_TDO		Reset Button Push(GPIO17)

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

39	I/O, IPD	EJT_TRSTN	GPIO21	UART2 Tx/Rx LED
40	I/O, IPD	EJT_TMS		Serial Command Mode #1(GPIO19)
41	I/O, IPD	EJT_TDI	GPIO18	UART1 Tx/Rx LED
42	I/O, IPD	EJT_TCK		WPS LED(GPIO20)
43		NC		
44		NC		
45		NC		
46		NC		
47	I/O, IPD	I2C_SCLK		Serial Command Mode #2(GPIO2)
48	I/O, IPD	I2C_SD		RUN LED(GPIO1)
49		GND		
50		3.3V		
51		GND		
52		3.3V		

Table 1. WizFi630 Pin Map

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

3.2. Dimensions

TOP VIEW

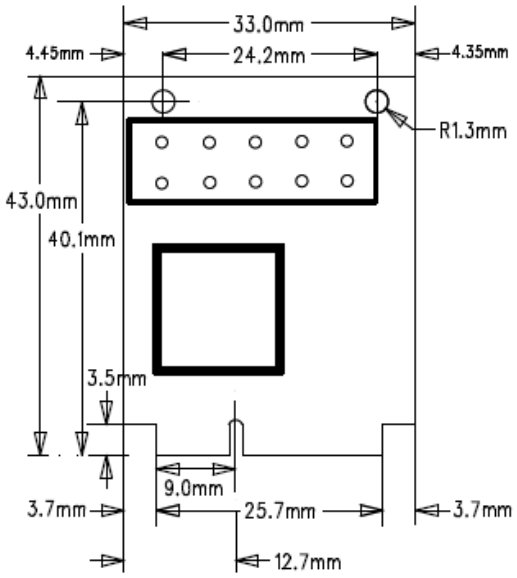

SIDE VIEW

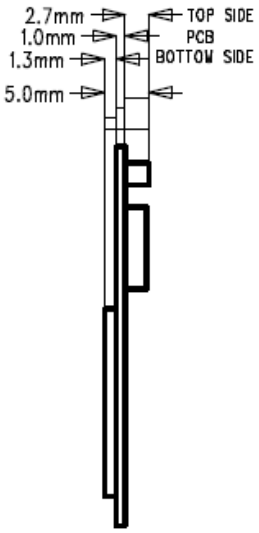

PCIe SOCKET

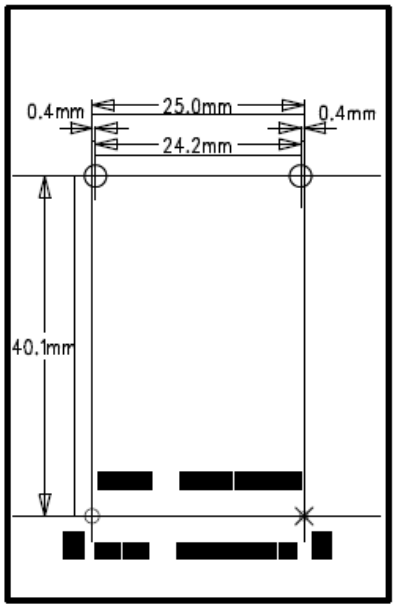

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

4. Important Notice

WIZnet reserves the right to make corrections, modifications, enhancements, improvements and other changes to its products and services at any time, and to discontinue any product or service without notice. Customers should obtain the latest relevant information before placing orders, and should verify that such information is current and complete. All products are sold subject to WIZnet's terms and conditions of sale, supplied at the time of order acknowledgment. Information relating to device applications, and the like, is intended as suggestion only and may be superseded by updates. It is the customer's responsibility to ensure that their application meets their own specifications. WIZnet makes no representation and gives no warranty relating to advice, support or customer product design.

WIZnet assumes no responsibilities or liabilities for the use of any of its products, conveys no license or title under any patent, copyright or mask work rights to these products, and makes no representations or warranties that these products are free from patent, copyright or mask work infringement, unless otherwise specified.

WIZnet products are not intended for use in life support systems/appliances or any systems where product malfunction can reasonably be expected to result in personal injury, death, severe property damage or environmental damage. WIZnet customers using or selling WIZnet products for use in such applications do so at their own risk and agree to fully indemnify WIZnet for any damages resulting from such use.

All trademarks are the property of their respective owners.

FCC Certification Requirements

Caution: Any changes or modifications in construction of this device which are not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and

(2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions may cause harmful interference to radio communications.

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

However, there is no guarantee that interference will not occur in a particular installation.
If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

WARNING: This equipment may generate or use radio frequency energy. Changes or modifications to this equipment may cause harmful interference unless the modifications are expressly approved in the instruction manual. The user could lose the authority to operate this equipment if an unauthorized change or modification is made.

This device complies with Part 15 of the FCC rules. Operation is subject to following two conditions: 1. this device may not cause harmful interference and 2. This device must accept any interference received including interference that may cause undesired Operation of this device.
The changes or modifications not expressly approved by the party responsible for Compliance could void the user's authority to operate the equipment.
To comply with the FCC RF exposure compliance requirements, this device and its antenna must not be co-located or operating to conjunction with any other antenna or transmitter, except if installed in compliance with FCC Multi Transmitter procedures.
To inherit the modular approval, the antennas for this transmitter must be installed to provide a separation distance of 20cm from all persons and must not be co-located or operating in Conjunction with any other antenna or transmitter.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, Pursuant to part 15 of the FCC Rules.
These limits are designed to provide reasonable Protection against harmful interference in a residential installation. This equipment generates Uses and can radiate radio frequency energy and, if not installed and used in accordance With the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference, Will not occur in a particular installation.
If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an Outlet on a circuit different from that to which the receiver is connected.

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

To OEM Installer

1. FCC ID on the final system must be labeled with "Contains FCC ID: XR2WIZ630WI" and "Contains transmitter Module FCC ID: XR2WIZ630WI "
2. In the user manual, final system integrator must ensure that there is no instruction provided in the user Manual to install or remove the transmitter module.
3. Transmitter module must be installed used in strict accordance with the Manufacturer's instructions as described in the user documentation that comes with the product. The user manual of the final host system must contain the following statements: This device complies with Part 15 of the FCC rules. Operation is subject to following
Two conditions: 1. this device may not cause harmful interference and 2. This device Must accept any interference received including interference that may cause undesired operation of this device.
The changes or modifications not expressly approved by the party responsible for
Compliance could void the user's authority to operate the equipment.
To comply with the FCC RF exposure compliance requirements, this device and its antenna must not be co-located or operating to conjunction with any other antenna or transmitter, except if installed In compliance with FCC Multi Transmitter procedures.
To inherit the modular approval, the antennas for this transmitter must be installed to provide a Separation distance of at least 20cm from all persons and must not be co-located or operating in Conjunction with any other antenna or transmitter.

Note:
The buyer of the module who will incorporate this module into his host must submit the final product to the Manufacturer of the module and the MANUFACTURER OF THE MODULE WILL VERIFY that the product is incorporated in host equipment in a way that is represented by the testing as shown in the test report.

Note:
The module is used AP, Gateway, Household. (except PC.)

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.

FCC RF Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna must not be co-located or operating in conjunction with any other antenna or transmitter.
"To comply with FCC RF exposure compliance requirements, this grant is applicable to only Mobile Configurations. The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter."

Manual Information to the End User

The OEM integrator has to be aware not to provide information to the end user regarding how to install or remove this RF module in the user's manual of the end product which integrates this module. The end user manual shall include all required regulatory information/warning as show in this manual.

© Copyright 2012 WIZnet Co., Ltd. All rights reserved.